



# Ruijie RG-CS83 Series Switches

## Hardware Installation and Reference Guide

Document Version: V1.3

Date: 2025-02-07

Copyright © 2025 Ruijie Networks

## Copyright

Copyright © 2025 Ruijie Networks

All rights are reserved in this document and this statement.

Without the prior written consent of Ruijie Networks, no organization or individual is permitted to reproduce, extract, back up, modify, or distribute the content of this document in any manner or form. It is also prohibited to translate the document into other languages or use any or all parts of it for commercial purposes.



and The Ruijie logo, which is a red stylized font of the brand name.

trademarks are owned by Ruijie Networks.

All other trademarks or registered trademarks mentioned in this document are owned by their respective owners.

## Disclaimer

The products, services, or features that you purchase are subject to commercial contracts and terms. It is possible that some or all of the products, services, or features described in this document may not be available for purchase or use. Unless agreed upon otherwise in the contract, Ruijie Networks does not provide any explicit or implicit statements or warranties regarding the content of this document.

The names, links, descriptions, screenshots, and any other information regarding third-party software mentioned in this document are provided for your reference only. Ruijie Networks does not explicitly or implicitly endorse or recommend the use of any third-party software and does not make any assurances or guarantees concerning the applicability, security, or legality of such software. You should choose and use third-party software based on your business requirements and obtain proper authorization. Ruijie Networks assumes no liability for any risks or damages arising from your use of third-party software.

The content of this document is subject to constant change due to product version upgrades or other reasons. Thus, Ruijie Networks reserves the right to modify the content of the document without prior notice or prompt.

This manual serves solely as a user guide. While Ruijie Networks endeavors to ensure the accuracy and reliability of the content when compiling this manual, it does not guarantee that the content of the manual is free of errors or omissions. All information contained in this manual does not constitute any explicit or implicit warranties.

## Personal Data Statement

During the operation or troubleshooting of the products, services, or features you have purchased, certain personal data of users may be collected or used. Therefore, it is essential for you to establish and implement appropriate privacy policies, in compliance with the relevant laws and regulations of the applicable countries or regions, to ensure the complete protection of users' personal data.

If Ruijie Networks is involved in this process, we will strictly adhere to the relevant laws and regulations of the applicable countries or regions and take all necessary actions to safeguard users' personal data.

When discarding, reclaiming, or reusing a device, please ensure to back up or clear any stored data to avoid data leakage. For assistance, please contact our after-sales technical support.

# Preface

## Intended Audience

This document is intended for:

- Network engineers
- Technical support and servicing engineers
- Network administrators

## Technical Support

- Ruijie Networks website: <https://www.ruijienetworks.com/>
- Online support center: <https://ruijienetworks.com/support>
- Case portal: <https://caseportal.ruijienetworks.com>
- Community: <https://community.ruijienetworks.com>
- Email support: [service\\_rj@ruijienetworks.com](mailto:service_rj@ruijienetworks.com)
- Live chat: <https://www.ruijienetworks.com/rita>
- Documentation feedback: [doc@ruijie.com.cn](mailto:doc@ruijie.com.cn)

## Conventions

### 1. Signs

The signs used in this document are described as follows:

#### Danger

An alert that contains important safety instructions. Before you work on any equipment, be aware of the hazards involved and be familiar with standard practices in case of accidents.

---

#### Warning

An alert that calls attention to important rules and information that if not understood or followed can result in data loss or equipment damage.

---

---

#### Caution

An alert that calls attention to essential information that if not understood or followed can result in function failure or performance degradation.

---

---

#### Note

An alert that contains additional or supplementary information that if not understood or followed will not lead to serious consequences.

---

---

#### Specification

An alert that contains a description of product or version support.

---

## **2. Note**

The manual provides configuration information, including models, port types, and command line interfaces, for reference purposes only. In the event of any discrepancy or inconsistency between the manual and the actual version, the actual version shall take precedence.

# Contents

Preface .....	1
1 Product Overviews .....	1
1.1 RG-CS83-24GT4XS .....	2
1.2 RG-CS83-48GT4XS .....	6
1.3 RG-CS83-12GT4XS-P .....	11
1.4 RG-CS83-24GT4XS-P .....	16
1.5 RG-CS83-48GT4XS-P .....	21
1.6 Pluggable Modules .....	27
1.7 Package Contents .....	27
2 Preparing for Installation .....	29
2.1 Safety Precautions .....	29
2.1.1 General Safety Precautions .....	29
2.1.2 Handling Safety .....	29
2.1.3 Electric Safety .....	29
2.1.4 Electrostatic Discharge Safety .....	30
2.1.5 Laser Safety .....	30
2.1.6 Storage Security .....	30
2.2 Installation Environment Requirements .....	31
2.2.1 Ventilation Requirements .....	31
2.2.2 Temperature/Humidity Requirements .....	31
2.2.3 Cleanliness Requirements .....	31
2.2.4 Anti-interference Requirements .....	32
2.2.5 Grounding Requirements .....	32

2.2.6 Lightning Protection Requirements .....	33
2.2.7 EMI Requirements .....	33
2.3 Fiber-Optic Cable Connection Requirements.....	34
2.4 Tools .....	34
3 Installing the Switch .....	35
3.1 Installing Procedure .....	35
3.2 Before You Begin.....	35
3.3 Mounting the Switch .....	36
3.3.1 Mounting the Switch in a Rack .....	36
3.3.2 Installing the Switch on a Workbench.....	38
3.3.3 Mounting the Switch on the Wall .....	38
3.4 Grounding the Switch .....	39
3.5 Connecting Cables.....	39
3.6 Cable Bundling.....	40
3.7 Verifying Installation.....	40
4 Verifying Operating Status .....	41
4.1 Setting up Configuration Environment.....	41
4.2 Powering on Switch .....	43
5 Monitoring and Maintenance.....	45
5.1 Monitoring .....	45
5.2 Maintenance .....	45
6 Troubleshooting.....	47
6.1 Troubleshooting Flowchart .....	47
6.2 Troubleshooting .....	47

7 Appendix.....	50
7.1 Connectors and Media.....	50
7.2 Lightening Protection .....	51
7.3 Cabling .....	53
7.4 Site Selection .....	57

# 1 Product Overviews

The RG-CS83 series switches are new generation layer 3 switches, providing high performance, consolidated security and multiple services. The switches are mainly applied to the access layer to provide line-rate switching and complete QoS policies, prioritizing some traffic over others to ensure important data transmission without latency. The switches also support a wide variety of Ethernet interfaces with flexible media options for network construction.

There are 5 models available now.

Model	10/100/1000Base-T Port	1GE/10GE SFP+ Port	MGMT Port	USB Port	RPS	Fan	Heat Dissipation
RG-CS83-24GT4XS	24	4	1	1	Fixed Power Supply	N/A	Natural heat dissipation
RG-CS83-48GT4XS	48	4	1	1	Fixed Power Supply	Fixed fan modules	Left- and front-side intake and right-side exhaust
RG-CS83-12GT4XS-P	12 (PoE+ Capable)	4	1	1	Fixed Power Supply	Fixed fan modules	Left- and front-side intake and right-side exhaust
RG-CS83-24GT4XS-P	24 (PoE+ Capable)	4	1	1	Fixed Power Supply	Fixed fan module	Left- and front-side intake and right-side exhaust
RG-CS83-48GT4XS-P	48 (PoE+ Capable)	4	1	1	Fixed Power Supply	Fixed fan modules	Left- and front-side intake and right-side exhaust

## Caution

- This is a Class A product. In a domestic environment this product may cause radio interference. In this case, users are advised to take proper measures against the interference.
- This device is not suitable for use in places where children may be present.

## Note

- An SFP+ port supports both 10GBase-R and 1000Base-X.
- The PoE+ port is backward compatible with the PoE standard.
- USB port: The USB port is the interface into which you plug your USB storage device for online upgrade or log storage.

- **Console port:** The console port is an RS-232 port that uses an RJ45 connector. The console port is used to connect a PC directly to the management system for debugging, configuration, maintenance, management and program loading.

## 1.1 RG-CS83-24GT4XS

### Specifications

<b>Model</b>	RG-CS83-24GT4XS
<b>CPU</b>	Dual-core CPU, each core with the clock speed of 1.0GHz
<b>BootROM</b>	16 MB (storing boot software for 1+1 boot redundancy)
<b>Flash memory</b>	512 MB (storing boot software for 1+1 boot redundancy)
<b>Memory</b>	1 GB
<b>Switch buffer</b>	1.5 MB
<b>Real-time clock (RTC)</b>	Supported
<b>Fixed service port</b>	24 x 10/100/1000BASE-T ports 4 x 1GE/10GE SFP+ ports
<b>Transmission medium</b>	10/100/1000BASE-T Cat 5 UTP 1000BASE-X to 1000BASE-T Cat 5e/6/6a 1000BASE-SX (850 nm) 1000BASE-LX (1310 nm) 1000BASE-LH (1310 nm) 1000BASE-ZX (1550 nm) 1000BASE-LX (1310 nm, 1550 nm) 1000BASE-LH (1310 nm, 1550 nm) 10GBASE-SR (850nm) 10GBASE-LR (1310nm) 10GBASE-ER (1550nm) 10GBASE SFP+ active optical cable (AOC)
<b>Fixed management port</b>	1 x RJ45 console port
<b>USB</b>	1 x USB 2.0 port (No capacity limit, 2G/4G/8G capacity tested)
<b>Status LED</b>	1 x System Status LED 24 x 10/100/1000BASE-T port LEDs 4 x 1GE/10GE SFP+ port LEDs



<b>Power supply</b>	1 x fixed power supply
<b>Power input</b>	<p>AC input</p> <ul style="list-style-type: none"> <li>Rated input voltage: 100 V AC to 240 V AC, 50 Hz to 60 Hz</li> <li>Maximum input voltage: 90 V AC to 264 V AC, 47 Hz to 63 Hz</li> <li>Maximum input current: 0.6 A</li> </ul>
<b>Maximum output power</b>	Built-in power supply: 25 W
<b>Maximum power consumption</b>	25 W
<b>Energy saving</b>	Supported
<b>Unit dimensions (W x D x H)</b>	442 mm x 220 mm x 43.6 mm (17.40 in. x 8.66 in. x 1.72 in.)
<b>Rack height</b>	1 RU
<b>Unit weight</b>	3.1 kg (6.83 lbs)
<b>Temperature</b>	<p>Operating temperature: 0°C to 45°C (32°F to 113°F)            Storage temperature: -40°C to +70°C (-40°F to +158°F)            Note: At an altitude between 1,800 m (5,905.51 ft.) and 5,000 m (16,404.20 ft.), every time the altitude increases by 220 m (721.78 ft.), the maximum temperature decreases by 1°C (1.8°F).</p>
<b>Humidity</b>	<p>Operating humidity: 10% to 90% RH (non-condensing)            Storage humidity: 5% to 95% RH (non-condensing)</p>
<b>Altitude</b>	<p>Operating altitude: 0 m to 5,000 m (0 ft. to 16,404.20 ft.)            Storage altitude: 0 m to 5,000 m (0 ft. to 16,404.20 ft.)</p>
<b>Mean time between failure (MTBF)</b>	207,962 hours (about 23 years)
<b>Acoustic noise</b>	Fanless, quiet, < 20 dB
<b>Cable hot swapping</b>	Cable hot swapping for all ports
<b>Safety regulation</b>	IEC 62368-1
<b>EMC regulation</b>	<p>EN 300386, EN 55032 Class A, EN 55035,            EN IEC 61000-3-2, EN 61000-3-3, EN 61000-4-2, EN 61000-4-3,            EN 61000-4-4, EN 61000-4-5, EN 61000-4-6, EN 61000-4-11</p>
<b>Communication standard</b>	<p>IEEE 802.3-2005 Ethernet standard            IEEE 803.ab, IEEE 802.3af, IEEE 802.1d, IEEE 802.1q, IEEE 802.3-2005 (802.3ae), and IEEE 802.3ba (2010) standards, supporting 802.1X authentication</p>

RoHS	Supported
------	-----------

### Appearance


The front panel of the RG-CS83-24GT4XS switch provides 24 10/100/1000Base-T Ethernet ports, four 10GE SFP+ ports, one Console port and one USB port. The back panel has an AC power plug.

**Figure 1-1 RG-CS83-24GT4XS Switch Appearance**

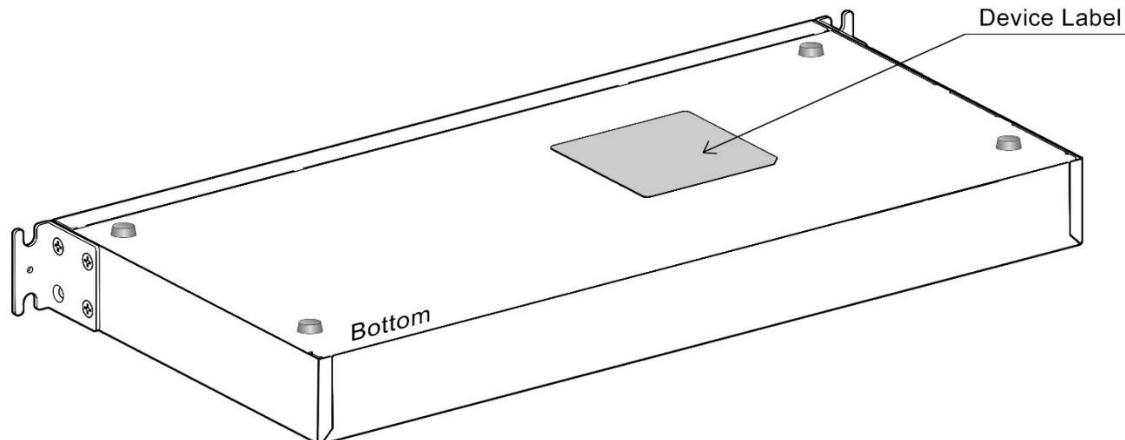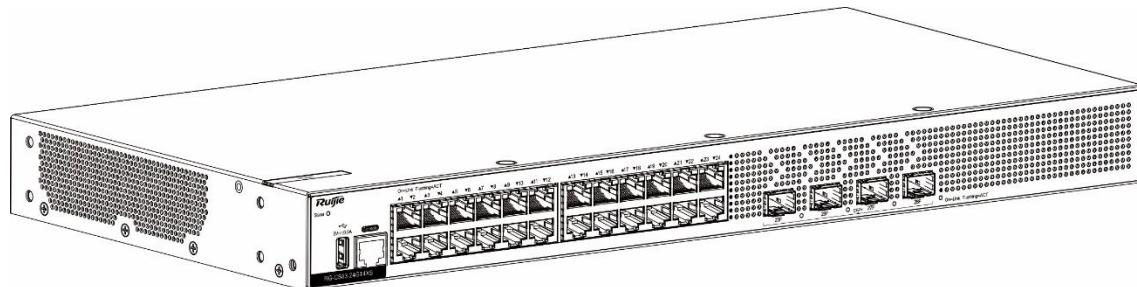

### Front Panel


**Figure 1-2 Front Panel of RG-CS83-24GT4XS**

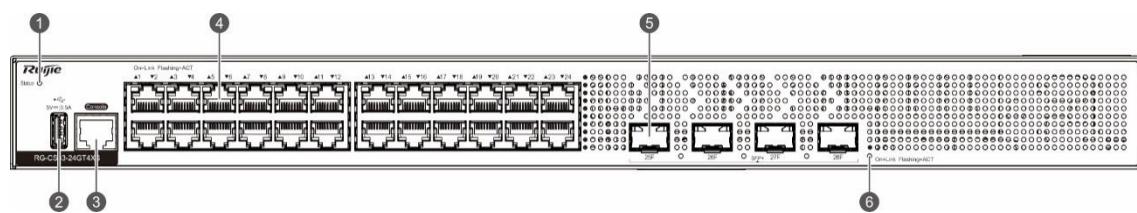

Note	1. System Status LED	4. 10/100/1000Base-T Port
	2. USB Port	5. 1GE/10GE SFP+ Port
	3. Console Port	6. Port Status LED

## Back Panel

**Figure 1-3 Back Panel of RG-CS83-24GT4XS**

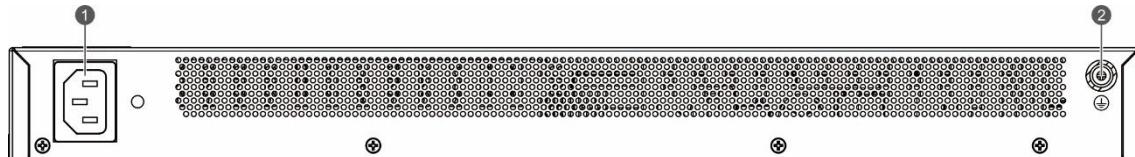

Note	1. AC Power Plug
	2. Grounding Stud

## Power Supply

The RG-CS83-24GT4XS switch has a built-in power supply module. The back panel has an AC power plug.

## Cooling

The RG-CS83-24GT4XS uses natural heat dissipation to ensure that the switch works properly in the specified environment. Maintain a minimum clearance of 100 mm (3.94 in.) around the device for air circulation.

## LED

Function	Panel ID	Color	Status
System Status LED	Status	Off	System is not powered on.
		Blinking Green (3 Hz)	System is being initialized. Continuous blinking indicates a fault.
		Blinking Green (10 Hz)	System is being located.
		Solid Green	System is operating normally.
		Solid Yellow	The temperature at the air intake and exhaust vents exceeds the threshold.
		Solid Red	1. The temperature at the air intake and exhaust vents well exceeds the threshold. 2. The system is not functioning properly.

Function	Panel ID	Color	Status
1GE/10GE SFP+ Port LED	25F-28F	Off	No link is detected for this port.
		Solid Green	The port has made a successful 1/10 Gbps link.
		Blinking Green	The port is sending and receiving traffic at 1/10 Gbps.
10/100/1000Base-T Port LED	1F to 24F	Off	No link is detected for this port.
		Solid Green	The port has made a successful 10/100/1000 Mbps link.
		Blinking Green	The port is sending and receiving traffic at 10/100/1000 Mbps.

## 1.2 RG-CS83-48GT4XS

### Specifications

<b>Model</b>	RG-CS83-48GT4XS
<b>CPU</b>	Dual-core CPU, each core with the clock speed of 1.0GHz
<b>BootROM</b>	16 MB (storing boot software for 1+1 boot redundancy)
<b>Flash memory</b>	512 MB (storing boot software for 1+1 boot redundancy)
<b>Memory</b>	1 GB
<b>Switch buffer</b>	1.5 MB
<b>Real-time clock (RTC)</b>	Supported
<b>Fixed service port</b>	48 x 10/100/1000BASE-T ports 4 x 1GE/10GE SFP+ ports
<b>Transmission medium</b>	10/100/1000BASE-T Cat 5 UTP 1000BASE-X to 1000BASE-T Cat 5e/6/6a 1000BASE-SX (850 nm) 1000BASE-LX (1310 nm) 1000BASE-LH (1310 nm) 1000BASE-ZX (1550 nm) 1000BASE-LX (1310 nm, 1550 nm) 1000BASE-LH (1310 nm, 1550 nm)



	10GBASE-SR (850nm) 10GBASE-LR (1310nm) 10GBASE-ER (1550nm) 10GBASE SFP+ active optical cable (AOC)
<b>Fixed management port</b>	1 x RJ45 console port
<b>USB</b>	1 x USB 2.0 port (No capacity limit, 2G/4G/8G capacity tested)
<b>Status LED</b>	1 x System Status LED 24 x 10/100/1000BASE-T port LEDs 4 x 1GE/10GE SFP+ port LEDs
<b>Power supply</b>	1 x fixed power supply
<b>Power input</b>	AC input <ul style="list-style-type: none"> <li>Rated input voltage: 100 V AC to 240 V AC, 50 Hz to 60 Hz</li> <li>Maximum input voltage: 90 V AC to 264 V AC, 47 Hz to 63 Hz</li> <li>Maximum input current: 1.5 A</li> </ul>
<b>Maximum output power</b>	Built-in power supply: 40 W
<b>Maximum power consumption</b>	40 W
<b>Energy saving</b>	Supported
<b>Unit dimensions (W x D x H)</b>	442 mm x 220 mm x 43.6 mm (17.40 in. x 8.66 in. x 1.72 in.)
<b>Rack height</b>	1 RU
<b>Unit weight</b>	4.10 kg (9 lbs)
<b>Temperature</b>	Operating temperature: 0°C to 45°C (32°F to 113°F) Storage temperature: -40°C to +70°C (-40°F to +158°F) Note: At an altitude between 1,800 m (5,905.51 ft.) and 5,000 m (16,404.20 ft.), every time the altitude increases by 220 m (721.78 ft.), the maximum temperature decreases by 1°C (1.8°F).
<b>Humidity</b>	Operating humidity: 10% to 90% RH (non-condensing) Storage humidity: 5% to 95% RH (non-condensing)
<b>Altitude</b>	Operating altitude: 0 m to 5,000 m (0 ft. to 16,404.20 ft.) Storage altitude: 0 m to 5,000 m (0 ft. to 16,404.20 ft.)
<b>Mean time between failure (MTBF)</b>	208,926 hours (about 23 years)

<b>Fan</b>	1 x fixed fan module
<b>Acoustic noise</b>	27°C (80.6°F): 32 dB
<b>Cable hot swapping</b>	Cable hot swapping for all ports
<b>Safety regulation</b>	IEC 62368-1
<b>EMC regulation</b>	EN 300386, EN 55032 Class A, EN 55035, EN IEC 61000-3-2, EN 61000-3-3, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6, EN 61000-4-11
<b>Communication standard</b>	IEEE 802.3-2005 Ethernet standard IEEE 803.ab, IEEE 802.3af, IEEE 802.1d, IEEE 802.1q, IEEE 802.3-2005 (802.3ae), and IEEE 802.3ba (2010) standards, supporting 802.1X authentication
<b>RoHS</b>	Supported


### Appearance

The front panel of the RG-CS83-48GT4XS Ethernet switch provides 48 10/100/1000Base-T Ethernet ports, four 10GE SFP+ ports, one Console port and one USB port. The back panel has an AC power plug.

**Figure 1-4 RG-CS83-48GT4XS Switch Appearance**

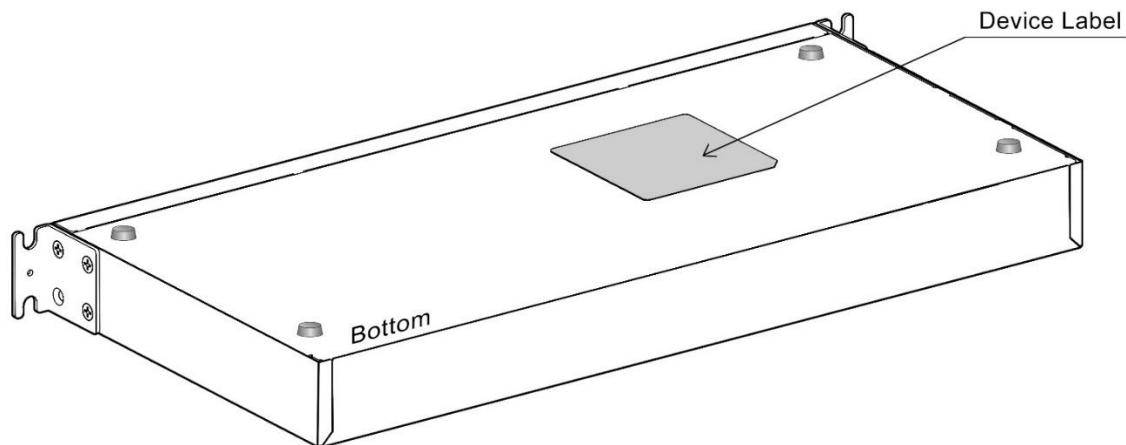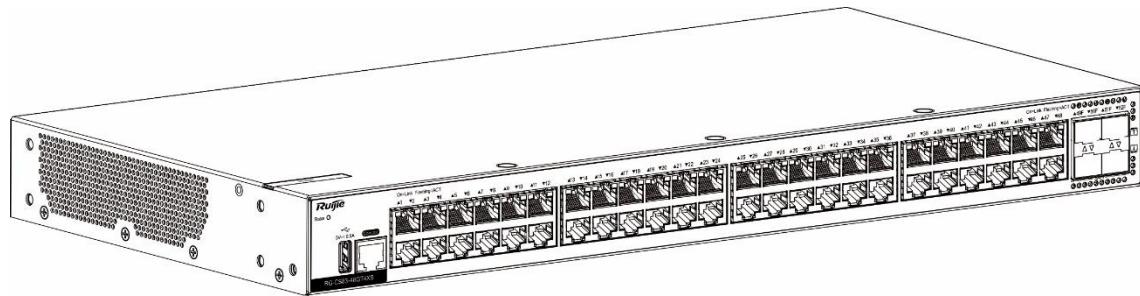

### Front Panel

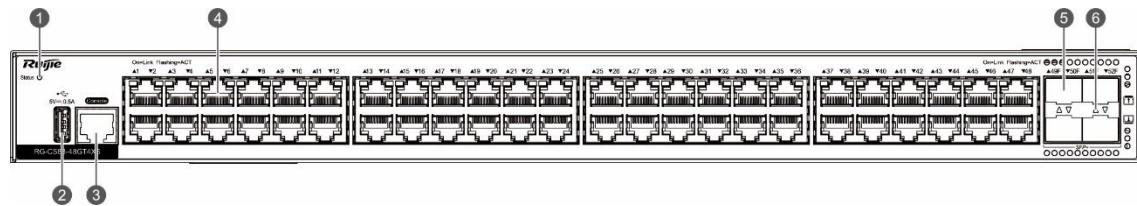**Figure 1-5 Front Panel of RG-CS83-48GT4XS**

Note

1. System Status LED	4. 10/100/1000Base-T Port
2. USB Port	5. 1GE/10GE SFP+ Port
3. Console Port	6. Port Status LED

### Back Panel

**Figure 1-6 Back Panel of RG-CS83-48GT4XS**

Note


1. AC Power Plug
2. Grounding Stud

### Power Supply

The RG-CS83-48GT4XS switch has a built-in power supply module. The back panel has an AC power plug.

### Cooling

The RG-CS83-48GT4XS switch adopts a left-to-right and front-to-right airflow to ensure normal operation. Maintain a minimum clearance of 100 mm (3.94 in.) around the device for air circulation.

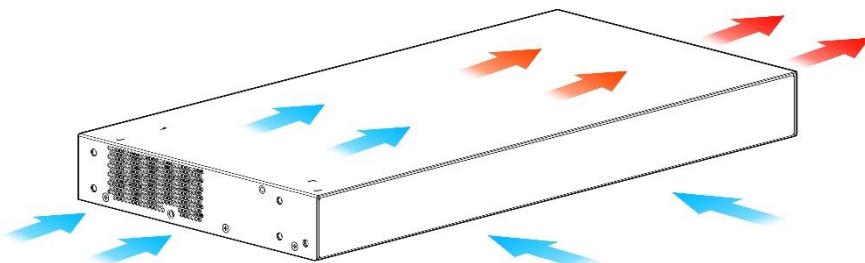**Figure 1-7 Airflow Direction****LED**

Function	Panel ID	Color	Status
System Status LED	Status	Off	System is not powered on.
		Blinking Green (3 Hz)	System is being initialized. Continuous blinking indicates a fault.
		Blinking Green (10 Hz)	System is being located.
		Solid Green	System is operating normally.
		Solid Yellow	The temperature at the air intake and exhaust vents exceeds the threshold.
		Solid Red	1. The temperature at the air intake and exhaust vents well exceeds the threshold. 2. The system is not functioning properly.
1GE/10GE SFP+ Port LED	49F to 52F	Off	No link is detected for this port.
		Solid Green	The port has made a successful 1/10 Gbps link.
		Blinking Green	The port is sending and receiving traffic at 1/10 Gbps.
10/100/1000Base-T Port LED	1F to 48F	Off	No link is detected for this port.
		Solid Green	The port has made a successful 10/100/1000 Mbps link.
		Blinking Green	The port is sending and receiving traffic at 10/100/1000 Mbps.

## 1.3 RG-CS83-12GT4XS-P

### Specifications

<b>Model</b>	RG-CS83-12GT4XS-P
<b>CPU</b>	Dual-core CPU, each core with the clock speed of 1.0GHz
<b>BootROM</b>	16 MB (storing boot software for 1+1 boot redundancy)
<b>Flash memory</b>	512 MB (storing boot software for 1+1 boot redundancy)
<b>Memory</b>	1 GB
<b>Switch buffer</b>	1.5 MB
<b>Real-time clock (RTC)</b>	Supported
<b>Fixed service port</b>	12 x 10/100/1000BASE-T ports, supporting PoE/PoE+ 4 x 1GE/10GE SFP+ ports
<b>Transmission medium</b>	10/100/1000BASE-T Cat 5 UTP 1000BASE-X to 1000BASE-T Cat 5e/6/6a 1000BASE-SX (850 nm) 1000BASE-LX (1310 nm) 1000BASE-LH (1310 nm) 1000BASE-ZX (1550 nm) 1000BASE-LX (1310 nm, 1550 nm) 1000BASE-LH (1310 nm, 1550 nm) 10GBASE-SR (850nm) 10GBASE-LR (1310nm) 10GBASE-ER (1550nm) 10GBASE SFP+ active optical cable (AOC)
<b>Fixed management port</b>	1 x RJ45 console port
<b>USB</b>	1 x USB 2.0 port (No capacity limit, 2G/4G/8G capacity tested)
<b>Button</b>	1 x LED mode button
<b>Status LED</b>	1 x System Status LED 1 x LED Mode LED 1 x PoE status LED 12 x 10/100/1000BASE-T port LEDs 4 x 1GE/10GE SFP+ port LEDs


<b>Power supply</b>	1 x fixed power supply
<b>Power input</b>	<p>AC input</p> <ul style="list-style-type: none"> <li>Rated input voltage: 100 V AC to 240 V AC, 50 Hz to 60 Hz</li> <li>Maximum input voltage: 90 V AC to 264 V AC, 47 Hz to 63 Hz</li> <li>Maximum input current: 6 A</li> </ul>
<b>Maximum output power</b>	Built-in power supply: 409 W
<b>Maximum power consumption</b>	35 W (non-PoE) 405 W (full PoE load)
<b>PoE port</b>	All RJ45 ports support PoE/PoE+ (IEEE802.3af/at) power supply
<b>PoE power cable pairs</b>	Mode A (1-2, 3-6 pairs)
<b>PoE output power</b>	<p>Each PoE port provides up to 30 W of power The maximum power is 370 W</p> <p>Note: The maximum number of powered devices supported by the switch is determined by the available power of the switch and the actual power consumption of each device.</p>
<b>Energy saving</b>	Supported
<b>Unit dimensions (W x D x H)</b>	442 mm x 220 mm x 43.6 mm (17.40 in. x 8.66 in. x 1.72 in.)
<b>Rack height</b>	1 RU
<b>Unit weight</b>	3.3 kg (7.28 lbs)
<b>Temperature</b>	<p>Operating temperature: 0°C to 45°C (32°F to 113°F) Storage temperature: -40°C to +70°C (-40°F to +158°F)</p> <p>Note: At an altitude between 1,800 m (5,905.51 ft.) and 5,000 m (16,404.20 ft.), every time the altitude increases by 220 m (721.78 ft.), the maximum temperature decreases by 1°C (1.8°F).</p>
<b>Humidity</b>	<p>Operating humidity: 10% to 90% RH (non-condensing) Storage humidity: 5% to 95% RH (non-condensing)</p>
<b>Altitude</b>	<p>Operating altitude: 0 m to 5,000 m (0 ft. to 16,404.20 ft.) Storage altitude: 0 m to 5,000 m (0 ft. to 16,404.20 ft.)</p>
<b>Mean time between failure (MTBF)</b>	211,466 hours (about 24 years)
<b>Fan</b>	1 x fixed fan module

<b>Acoustic noise</b>	27°C (80.6°F): 35 dB
<b>Cable hot swapping</b>	Cable hot swapping for all ports
<b>Safety regulation</b>	IEC 62368-1
<b>EMC regulation</b>	EN 300386, EN 55032 Class A, EN 55035, EN IEC 61000-3-2, EN 61000-3-3, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6, EN 61000-4-11
<b>Communication standard</b>	IEEE 802.3-2005 Ethernet standard IEEE 803.ab, IEEE 802.3af, IEEE 802.1d, IEEE 802.1q, IEEE 802.3-2005 (802.3ae), and IEEE 802.3ba (2010) standards, supporting 802.1X authentication
<b>RoHS</b>	Supported


### Appearance

The front panel of the RG-CS83-12GT4XS-P switch provides 12 10/100/1000Base-T Ethernet ports (PoE+ Capable), four 10GE SFP+ ports, one Console port and one USB port. The back panel has an AC power plug.

**Figure 1-8 RG-CS83-12GT4XS-P Switch Appearance**

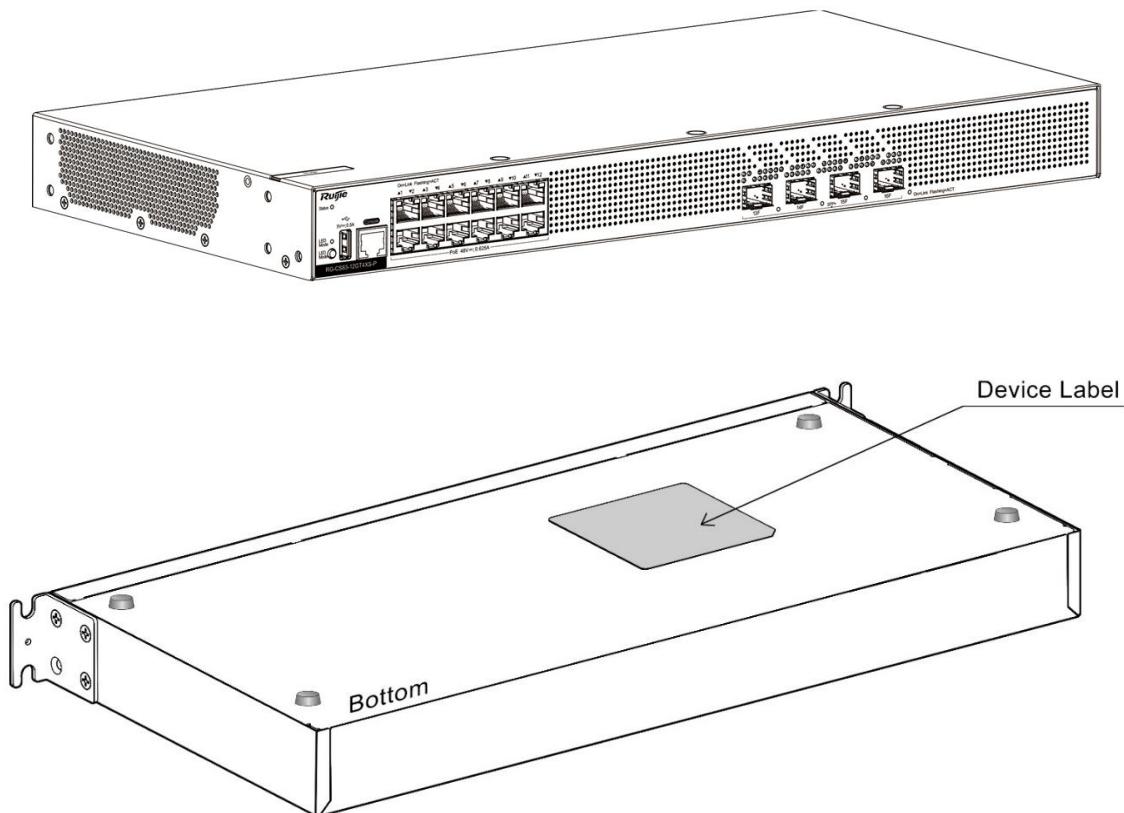

### Front Panel

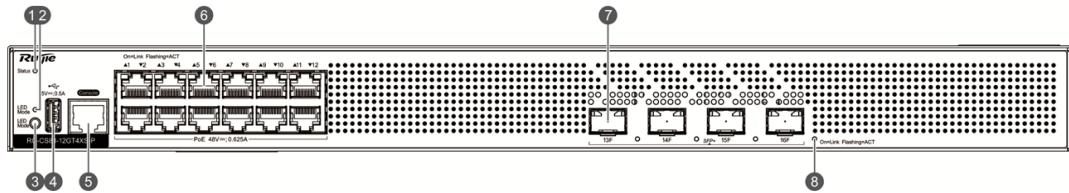**Figure 1-9 Front Panel of RG-CS83-12GT4XS-P**

Note

1. System Status LED	5. Console Port
2. LED Mode LED	6. 10/100/1000Base-T Port
3. LED Mode button	7. 1GE/10GE SFP+ Port
4. USB Port	8. Port Status LED

### Back Panel

**Figure 1-10 Back Panel of RG-CS83-12GT4XS-P**

Note


1. AC Power Plug
2. Grounding Stud

### Power Supply Module

The RG-CS83-12GT4XS-P switch has a built-in power supply module. The back panel has an AC power plug.

### Cooling

The RG-CS83-12GT4XS-P switch adopts a left-to-right and front-to-right airflow to ensure normal operation. Maintain a minimum clearance of 100 mm (3.94 in.) around the device for air circulation.

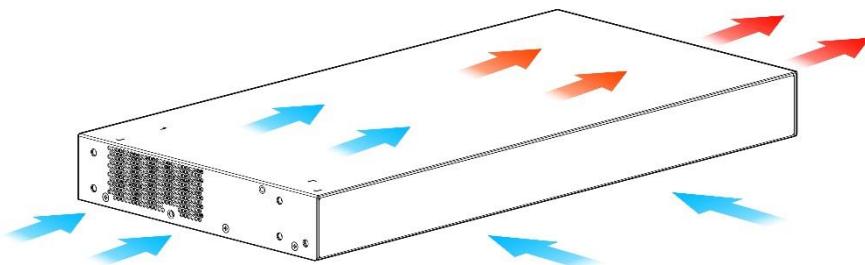**Figure 1-11 Airflow Direction****LED**

Function	Panel ID	Color	Status
System Status LED	Status	Off	System is not powered on.
		Blinking Green (3 Hz)	System is being initialized. Continuous blinking indicates a fault.
		Blinking Green (10 Hz)	System is being located.
		Solid Green	System is operating normally.
		Solid Yellow	The temperature at the air intake and exhaust vents exceeds the threshold.
		Solid Red	1. The temperature at the air intake and exhaust vents well exceeds the threshold. 2. The system is not functioning properly.
LED Mode LED	LED Mode	Solid green	The LED indicates the switching status.
		Solid yellow	The LED indicates the PoE power supply status.
1GE/10GE SFP+ Port LED	13F-16F	Off	No link is detected for this port.
		Solid Green	The port has made a successful 1/10 Gbps link.
		Blinking Green	The port is sending and receiving traffic at 1/10 Gbps.
10/100/1000Base-T Port LED (switching status)	1-12	Off	No link is detected for this port.
		Solid Green	The port has made a successful 10/100/1000 Mbps link.

Function	Panel ID	Color	Status
		Blinking Green	The port is sending and receiving traffic at 10/100/1000 Mbps.
10/100/1000Base-T Port LED (PoE status)	1-12	Off	PoE is not enabled.
		Solid Green	PoE is enabled. The port is operational.
		Blinking Green(3 Hz)	The port has a PoE fault or overload.

 **Note**

LED Mode Button:

- The LED Mode button is used to switch the LED mode. The green LED Mode indicator indicates the switching status. Press the LED Mode button, and the LED Mode indicator will turn yellow, indicating the PoE status. Press the LED Mode button again, the indicator switches to indicating the switching status.
- If you want to switch the LED mode, press the button for over two seconds.

## 1.4 RG-CS83-24GT4XS-P

### Specifications




<b>Model</b>	RG-CS83-24GT4XS-P
<b>CPU</b>	Dual-core CPU, each core with the clock speed of 1.0GHz
<b>BootROM</b>	16 MB (storing boot software for 1+1 boot redundancy)
<b>Flash memory</b>	512 MB (storing boot software for 1+1 boot redundancy)
<b>Memory</b>	1 GB
<b>Switch buffer</b>	1.5 MB
<b>Real-time clock (RTC)</b>	Supported
<b>Fixed service port</b>	24 x 10/100/1000BASE-T ports, supporting PoE/PoE+ 4 x 1GE/10GE SFP+ ports
<b>Transmission medium</b>	10/100/1000BASE-T Cat 5 UTP 1000BASE-X to 1000BASE-T Cat 5e/6/6a 1000BASE-SX (850 nm) 1000BASE-LX (1310 nm) 1000BASE-LH (1310 nm) 1000BASE-ZX (1550 nm)

	1000BASE-LX (1310 nm, 1550 nm) 1000BASE-LH (1310 nm, 1550 nm) 10GBASE-SR (850nm) 10GBASE-LR (1310nm) 10GBASE-ER (1550nm) 10GBASE SFP+ active optical cable (AOC)
<b>Fixed management port</b>	1 x RJ45 console port
<b>USB</b>	1 x USB 2.0 port (No capacity limit, 2G/4G/8G capacity tested)
<b>Button</b>	1 x LED mode button
<b>Status LED</b>	1 x System Status LED 1 x LED Mode LED 1 x PoE status LED 24 x 10/100/1000BASE-T port LEDs 4 x 1GE/10GE SFP+ port LEDs
<b>Power supply</b>	1 x fixed power supply
<b>Power input</b>	AC input <ul style="list-style-type: none"> <li>● Rated input voltage: 100 V AC to 240 V AC, 50 Hz to 60 Hz</li> <li>● Maximum input voltage: 90 V AC to 264 V AC, 47 Hz to 63 Hz</li> <li>● Maximum input current: 6 A</li> </ul>
<b>Maximum output power</b>	Built-in power supply: 409 W
<b>Maximum power consumption</b>	35 W (non-PoE) 405 W (full PoE load)
<b>PoE port</b>	All RJ45 ports support PoE/PoE+ (IEEE802.3af/at) power supply
<b>PoE power cable pairs</b>	Mode A (1-2, 3-6 pairs)
<b>PoE output power</b>	Each PoE port provides up to 30 W of power The maximum power is 370 W Note: The maximum number of powered devices supported by the switch is determined by the available power of the switch and the actual power consumption of each device.
<b>Energy saving</b>	Supported
<b>Unit dimensions (W x D x H)</b>	442 mm x 220 mm x 43.6 mm (17.40 in. x 8.66 in. x 1.72 in.)

<b>Rack height</b>	1 RU
<b>Unit weight</b>	3.4 kg (7.50 lbs)
<b>Temperature</b>	Operating temperature: 0°C to 45°C (32°F to 113°F) Storage temperature: -40°C to +70°C (-40°F to +158°F) Note: At an altitude between 1,800 m (5,905.51 ft.) and 5,000 m (16,404.20 ft.), every time the altitude increases by 220 m (721.78 ft.), the maximum temperature decreases by 1°C (1.8°F).
<b>Humidity</b>	Operating humidity: 10% to 90% RH (non-condensing) Storage humidity: 5% to 95% RH (non-condensing)
<b>Altitude</b>	Operating altitude: 0 m to 5,000 m (0 ft. to 16,404.20 ft.) Storage altitude: 0 m to 5,000 m (0 ft. to 16,404.20 ft.)
<b>Mean time between failure (MTBF)</b>	209,714 hours (about 23 years)
<b>Fan</b>	1 x fixed fan module
<b>Acoustic noise</b>	27°C (80.6°F): 32 dB
<b>Cable hot swapping</b>	Cable hot swapping for all ports
<b>Safety regulation</b>	IEC 62368-1
<b>EMC regulation</b>	EN 300386, EN 55032 Class A, EN 55035, EN IEC 61000-3-2, EN 61000-3-3, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6, EN 61000-4-11
<b>Communication standard</b>	IEEE 802.3-2005 Ethernet standard IEEE 803.ab, IEEE 802.3af, IEEE 802.1d, IEEE 802.1q, IEEE 802.3-2005 (802.3ae), and IEEE 802.3ba (2010) standards, supporting 802.1X authentication
<b>RoHS</b>	Supported

## Appearance

The front panel of the RG-CS83-24GT4XS-P Ethernet switch provides 24 10/100/1000Base-T Ethernet ports, four 10GE SFP+ ports, one Console port and one USB port. The back panel has an AC power plug.

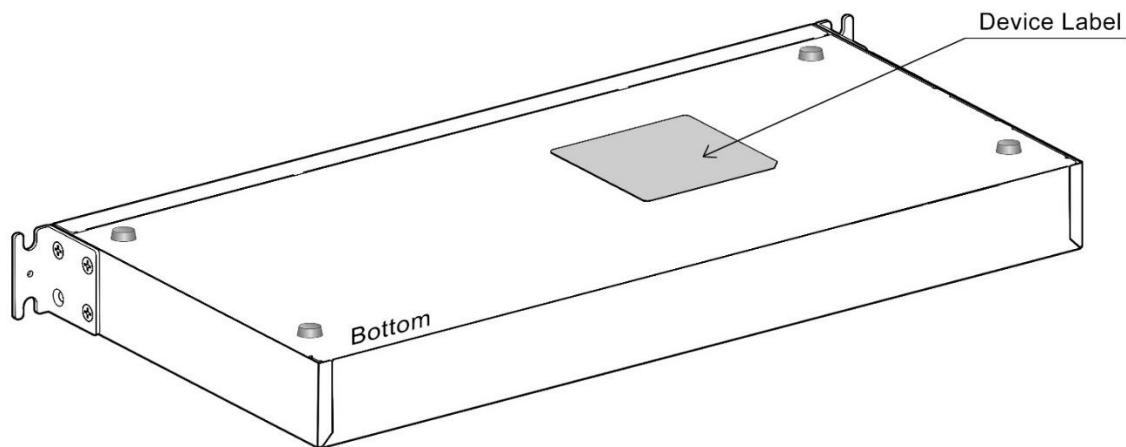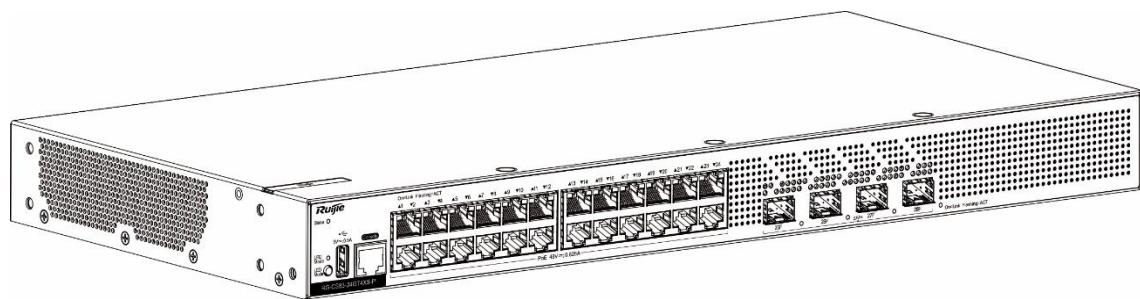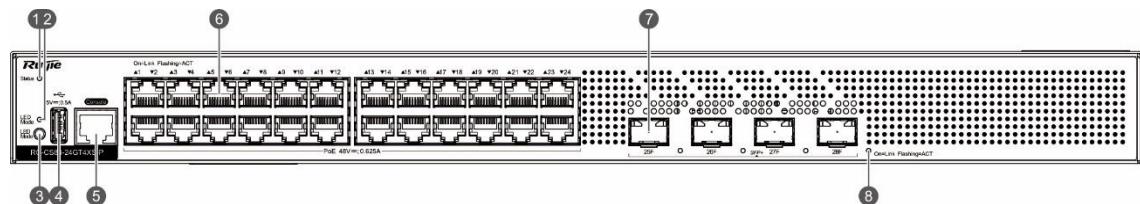**Figure 1-12 RG-CS83-24GT4XS-P Switch Appearance****Front Panel****Figure 1-13 Front Panel of RG-CS83-24GT4XS-P**

Note	1. System Status LED	5. Console Port
	2. LED Mode LED	6. 10/100/1000Base-T Port
	3. LED Mode button	7. 1GE/10GE SFP+ Port
	4. USB Port	8. Port Status LED

**Back Panel**

**Figure 1-14 Back Panel of RG-CS83-24GT4XS-P**

Note 1. AC power plug


2. Grounding Stud

### Power Supply

The RG-CS83-24GT4XS-P switch has a built-in power supply module. The back panel has an AC power plug.

### Cooling

The RG-CS83-24GT4XS-P switch adopts a left-to-right and front-to-right airflow to ensure normal operation. Maintain a minimum clearance of 100 mm (3.94 in.) around the device for air circulation.

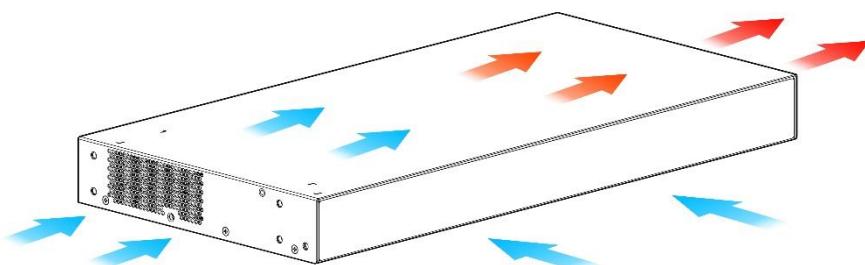**Figure 1-15 Airflow Direction**

### LED

Function	Panel ID	Color	Status
System Status LED	Status	Off	System is not powered on.
		Blinking Green (3 Hz)	System is being initialized. Continuous blinking indicates a fault.
		Blinking Green (10 Hz)	System is being located.
		Solid Green	System is operating normally.
		Solid Yellow	The temperature at the air intake and exhaust vents exceeds the threshold.

Function	Panel ID	Color	Status
		Solid Red	1. The temperature at the air intake and exhaust vents well exceeds the threshold. 2. The system is not functioning properly.
LED Mode LED	LED Mode	Solid green	The LED indicates the switching status.
		Solid yellow	The LED indicates the PoE power supply status.
1GE/10GE SFP+ Port LED	25F to 28F	Off	No link is detected for this port.
		Solid Green	The port has made a successful 1/10 Gbps link.
		Blinking Green	The port is sending and receiving traffic at 1/10 Gbps.
10/100/1000Base-T Port LED (switching status)	1 to 24	Off	No link is detected for this port.
		Solid Green	The port has made a successful 10/100/1000 Mbps link.
		Blinking Green	The port is sending and receiving traffic at 10/100/1000 Mbps.
10/100/1000Base-T Port LED (PoE status)	1 to 24	Off	PoE is not enabled.
		Solid Green	PoE is enabled. The port is operational.
		Blinking Green(3 Hz)	The port has a PoE fault of overload.

### Note

LED Mode Button:

- The LED Mode button is used to switch the LED mode. The green LED Mode indicator indicates the switching status. Press the LED Mode button, and the LED Mode indicator will turn yellow, indicating the PoE status. Press the LED Mode button again, the indicator switches to indicating the switching status.
- If you want to switch the LED mode, press the button for over two seconds.

## 1.5 RG-CS83-48GT4XS-P

### Specifications

Model	RG-CS83-48GT4XS-P
CPU	Dual-core CPU, each core with the clock speed of 1.0GHz

<b>BootROM</b>	16 MB (storing boot software for 1+1 boot redundancy)
<b>Flash memory</b>	512 MB (storing boot software for 1+1 boot redundancy)
<b>Memory</b>	1 GB
<b>Switch buffer</b>	1.5 MB
<b>Real-time clock (RTC)</b>	Supported
<b>Fixed service port</b>	24 x 10/100/1000BASE-T ports, supporting PoE/PoE+ 4 x 1GE/10GE SFP+ ports
<b>Transmission medium</b>	10/100/1000BASE-T Cat 5 UTP 1000BASE-X to 1000BASE-T Cat 5e/6/6a 1000BASE-SX (850 nm) 1000BASE-LX (1310 nm) 1000BASE-LH (1310 nm) 1000BASE-ZX (1550 nm) 1000BASE-LX (1310 nm, 1550 nm) 1000BASE-LH (1310 nm, 1550 nm) 10GBASE-SR (850nm) 10GBASE-LR (1310nm) 10GBASE-ER (1550nm) 10GBASE SFP+ active optical cable (AOC)
<b>Fixed management port</b>	1 x RJ45 console port
<b>USB</b>	1 x USB 2.0 port (No capacity limit, 2G/4G/8G capacity tested)
<b>Button</b>	1 x LED mode button
<b>Status LED</b>	1 x System Status LED 1 x LED Mode LED 1 x PoE status LED 24 x 10/100/1000BASE-T port LEDs 4 x 1GE/10GE SFP+ port LEDs
<b>Power supply</b>	1 x fixed power supply
<b>Power input</b>	AC input <ul style="list-style-type: none"> <li>● Rated input voltage: 100 V AC to 240 V AC, 50 Hz to 60 Hz</li> <li>● Maximum input voltage: 90 V AC to 264 V AC, 47 Hz to 63 Hz</li> <li>● Maximum input current: 6 A</li> </ul>



<b>Maximum output power</b>	Built-in power supply: 460 W
<b>Maximum power consumption</b>	52 W (non-PoE) 460 W (full PoE load)
<b>PoE port</b>	All RJ45 ports support PoE/PoE+ (IEEE802.3af/at) power supply
<b>PoE power cable pairs</b>	Mode A (1-2, 3-6 pairs)
<b>PoE output power</b>	Each PoE port provides up to 30 W of power The maximum power is 370 W Note: The maximum number of powered devices supported by the switch is determined by the available power of the switch and the actual power consumption of each device.
<b>Energy saving</b>	Supported
<b>Unit dimensions (W x D x H)</b>	442 mm x 220 mm x 43.6 mm (17.40 in. x 8.66 in. x 1.72 in.)
<b>Rack height</b>	1 RU
<b>Unit weight</b>	4.0 kg (8.82 lbs)
<b>Temperature</b>	Operating temperature: 0°C to 45°C (32°F to 113°F) Storage temperature: -40°C to +70°C (-40°F to +158°F) Note: At an altitude between 1,800 m (5,905.51 ft.) and 5,000 m (16,404.20 ft.), every time the altitude increases by 220 m (721.78 ft.), the maximum temperature decreases by 1°C (1.8°F).
<b>Humidity</b>	Operating humidity: 10% to 90% RH (non-condensing) Storage humidity: 5% to 95% RH (non-condensing)
<b>Altitude</b>	Operating altitude: 0 m to 5,000 m (0 ft. to 16,404.20 ft.) Storage altitude: 0 m to 5,000 m (0 ft. to 16,404.20 ft.)
<b>Mean time between failure (MTBF)</b>	200,253 hours (about 22 years)
<b>Fan</b>	1 x fixed fan module
<b>Cable hot swapping</b>	Cable hot swapping for all ports
<b>Acoustic noise</b>	27°C (80.6°F): 35 dB
<b>Safety regulation</b>	IEC 62368-1
<b>EMC regulation</b>	EN 300386, EN 55032 Class A, EN 55035, EN IEC 61000-3-2, EN 61000-3-3, EN 61000-4-2, EN 61000-4-3,

	EN 61000-4-4, EN 61000-4-5, EN 61000-4-6, EN 61000-4-11
<b>Communication standard</b>	IEEE 802.3-2005 Ethernet standard IEEE 803.ab, IEEE 802.3af, IEEE 802.1d, IEEE 802.1q, IEEE 802.3-2005 (802.3ae), and IEEE 802.3ba (2010) standards, supporting 802.1X authentication
<b>RoHS</b>	Supported

### Appearance


The front panel of the RG-CS83-48GT4XS-P switch provides 48 10/100/1000Base-T Ethernet ports, four 10GE SFP+ ports, one Console port and one USB port. The back panel has an AC power plug.

**Figure 1-16 RG-CS83-48GT4XS-P Switch Appearance**

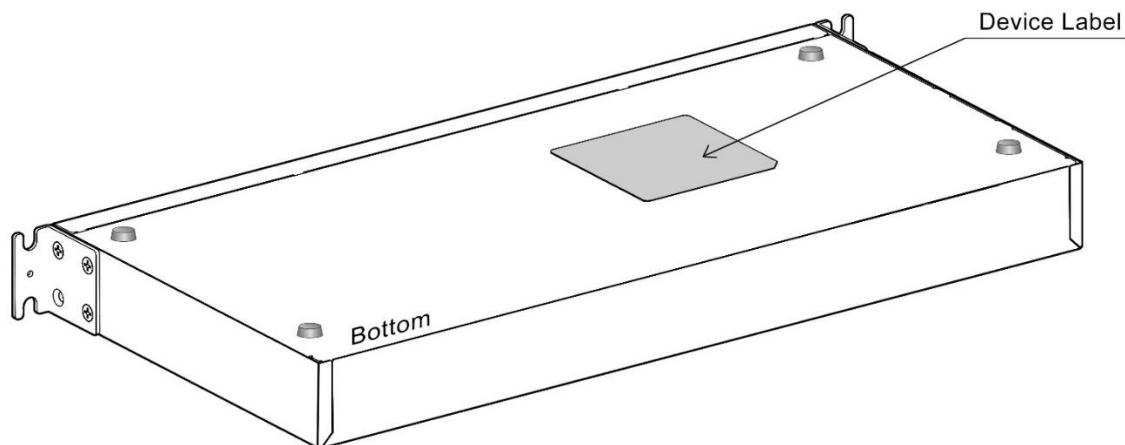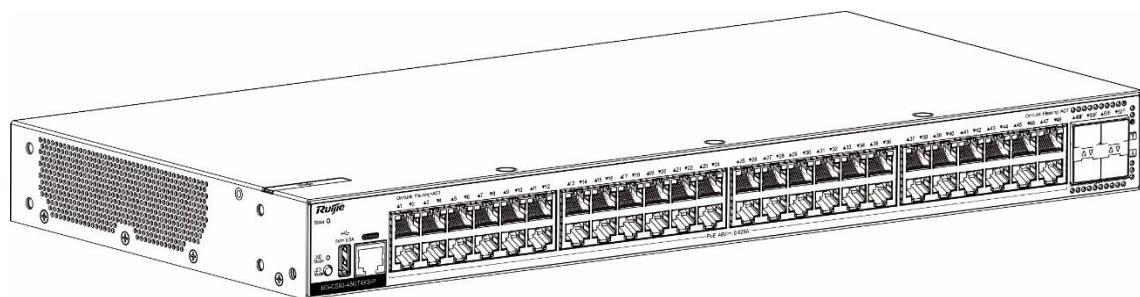

### Front Panel

**Figure 1-17 Front Panel of RG-CS83-48GT4XS-P**

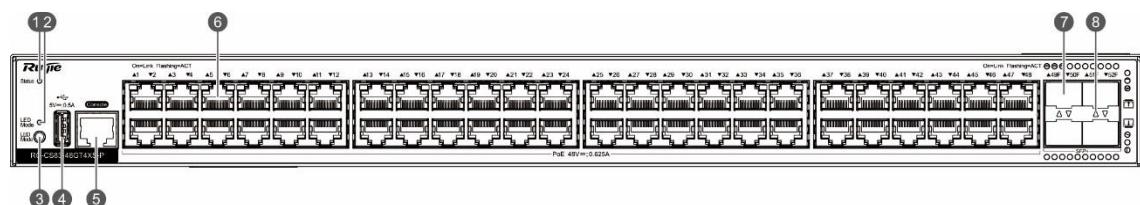

Note	1. System Status LED	5. Console Port
	2. LED Mode LED	6. 10/100/1000Base-T Port
	3. LED Mode button	7. 1GE/10GE SFP+ Port
	4. USB Port	8. Port Status LED

## Back Panel

**Figure 1-18 Back Panel of RG-CS83-48GT4XS-P**



Note	1. AC Power Plug
	2. Grounding Stud


## Power Supply

The RG-CS83-48GT4XS-P switch has a built-in power supply module. The back panel has an AC power plug.

## Cooling

The RG-CS83-48GT4XS-P switch adopts a left-to-right and front-to-right airflow to ensure normal operation. Maintain a minimum clearance of 100 mm (3.94 in.) around the device for air circulation.

**Figure 1-19 Airflow Direction**

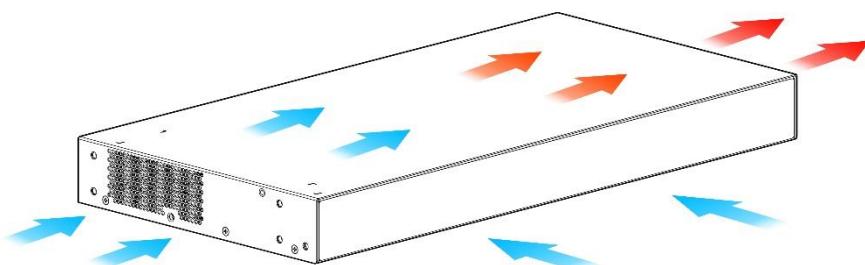

## LED

Function	Panel ID	Color	Status
System Status LED	Status	Off	System is not powered on.
		Blinking Green (3 Hz)	System is being initialized. Continuous blinking indicates a fault.
		Blinking Green (10 Hz)	System is being located.
		Solid Green	System is operating normally.
		Solid Yellow	The temperature at the air intake and exhaust vents exceeds the threshold.
		Solid Red	1. The temperature at the air intake and exhaust vents well exceeds the threshold. 2. The system is not functioning properly.
LED Mode LED	LED Mode	Solid green	The LED indicates the switching status.
		Solid yellow	The LED indicates the PoE power supply status.
1GE/10GE SFP+ Port LED	49 to 52	Off	No link is detected for this port.
		Solid Green	The port has made a successful 1/10 Gbps link.
		Blinking Green	The port is sending and receiving traffic at 1/10 Gbps.
10/100/1000Base-T Port LED (switching status)	1 to 48	Off	No link is detected for this port.
		Solid Green	The port has made a successful 10/100/1000 Mbps link.
		Blinking Green	The port is sending and receiving traffic at 10/100/1000 Mbps.
10/100/1000Base-T Port LED (PoE status)	1F to 48F	Off	PoE is not enabled.
		Solid Green	PoE is enabled. The port is operational.
		Blinking Green(3 Hz)	The port has a PoE fault of overload.

 **Note**

LED Mode Button :

- The LED Mode button is used to switch the LED mode. The green LED Mode indicator indicates the switching status. Press the LED Mode button, and the LED Mode indicator will turn yellow, indicating the PoE status. Press the LED Mode button again, the indicator switches to indicating the switching status.

---

- If you want to switch the LED mode, press the button for over two seconds.

---

## 1.6 Pluggable Modules

The following table describes the compatibility between switches and optical transceivers.

For more information, visit Ruijie Networks official website at <https://www.ruijenetworks.com/>. Choose **Support > Documentation and Download > Products > Switches > Accessories > Optics and Transceivers**. Click on the optical transceiver model to access related documents, or use keywords to search for required documents.

Models	Matching Optical Transceivers
RG-CS83-24GT4XS	1GE optical transceivers
● 4 x 1GE/10GE SFP+ ports	<ul style="list-style-type: none"> <li>● Mini-GBIC-GT</li> <li>● MINI-GBIC-SX-MM850</li> <li>● MINI -GBIC-LX-SM1310</li> <li>● MINI -GBIC-LH40-SM1310</li> <li>● MINI-GBIC-ZX80-SM1550</li> <li>● GE-SFP-LX20-SM1310-BIDI</li> <li>● GE-SFP-LX20-SM1550-BIDI</li> <li>● GE-SFP-LH40-SM1310-BIDI</li> <li>● GE-SFP-LH40-SM1550-BIDI</li> </ul>
RG-CS83-48GT4XS	10GE optical transceivers and cables
● 4 x 1GE/10GE SFP+ ports	<ul style="list-style-type: none"> <li>● XG-SFP-SR-MM850</li> <li>● XG-SFP-LR-SM1310</li> <li>● XG-SFP-ER-SM1550</li> <li>● XG-SFP-AOC1M</li> <li>● XG-SFP-AOC3M</li> <li>● XG-SFP-AOC5M</li> </ul>
RG-CS83-12GT4XS-P	
● 4 x 1GE/10GE SFP+ ports	
RG-CS83-24GT4XS-P	
● 4 x 1GE/10GE SFP+ ports	
RG-CS83-48GT4XS-P	
● 4 x 1GE/10GE SFP+ ports	

### Caution

Use pluggable modules supplied by Ruijie Networks. The reliability of modules supplied by other vendors cannot be guaranteed, which may cause service instability. If you use a module supplied by other vendors, Ruijie Networks will not be liable for the service issues and will not solve them in principle.

---

## 1.7 Package Contents

Item	RG-CS83 Series
Chassis	1
Power cord	1
Grounding wire	1

Item	RG-CS83 Series
Nylon buckle	1
Mounting bracket	2
Rubber pad	4
Cross recessed countersunk head screw, M4x8, GB819-85	8
M6*16 screw	4
M6 cage nut	4
<i>Mounting Bracket Installation Guide</i>	1
<i>Warranty Manual and Network Product Hazardous Substance Statement</i>	1
Ruijie Networks Access Product Management Software	1 (pre-installed)

---

 **Note**

A normal delivery should contain the above mentioned items, which may differ from the actual delivery, depending on purchase contracts. Please check your goods carefully according to the packing list or purchase contract. If you have any questions or there are any errors, please contact your distributor.

---

# 2 Preparing for Installation

## 2.1 Safety Precautions

---

### Note

- To avoid personal injury and device damage, carefully read the safety precautions before you install the switch.
- The following safety precautions may not cover all possible dangers.

---

### 2.1.1 General Safety Precautions

- Keep the chassis clean, free from any dust.
- Do not place the device in walking areas.
- During the installation and maintenance, do not wear loose clothes, ornaments, or any other things that may be hooked by the chassis.

### 2.1.2 Handling Safety

- Prevent the switch from being frequently handled.
- Keep balance and prevent personal injuries when handling the switch
- Cut off all the power supplies and unplug all power cords before moving or handling the switch.

### 2.1.3 Electric Safety

- Observe local regulations and specifications during electric operations. Only personnel with relevant qualifications can perform such operations.
- Check whether there are potential risks in the work area. For example, check whether the power supply is grounded, whether the grounding is reliable, and whether the ground is wet.
- Find out the position of the indoor emergency power switch before installation. Cut off the power switch in case of accidents.
- Make sure that the device is powered off when you cut off the power supply.
- Do not place the switch in a wet position, and keep the switch away from liquid.

---

### Caution

- Any nonstandard and inaccurate operation can cause an accident such as fire or electrical attack, thus causing severe damages to human bodies and device.
- Direct or indirect touch through a wet object on high-voltage and mains supply can bring a fatal danger.
- If a power supply system is equipped with a leakage protector (also referred to as "leakage current switch" or "leakage current breaker"), the rated leakage action current of each leakage protector is greater than twice of the theoretical maximum leakage current of all the power supplies in the system. For example, if a system is equipped with 16 identical power supplies, the leakage current of each power

supply is equal to or less than 1.75 mA, and the leakage current of the system totals 28 mA. A leakage protector with 30 mA rated action current supports less than nine power supplies (that is, Action current of the leakage protector/2/Maximum leakage current of each power supply =  $30/2/1.75 \approx 8.57$ ). In other words, the leakage protector with 30 mA rated action current supports no more than eight power supplies. In this case, the 16 power supplies in the system require at least two leakage protectors with 30 mA rated action current and each leakage protector supports eight power supplies. If power supplies in a system differ in models, the rated leakage action current of each leakage protector divided by two is greater than the sum of maximum leakage currents of all the power supplies. The rated leakage non-action current of a leakage protector shall be 50% of the leakage action current. Take a leakage protector with 30 mA rated leakage action current as an example. The rated leakage non-action current shall be 15 mA. When the leakage current is below 15 mA, the protector shall not act. Otherwise, misoperation may easily occur due to high sensitivity and thus the leakage protector trips, devices are powered off, and services are interrupted.

- To guarantee personal safety, the rated leakage action current of each leakage protector in the system must be equal to or less than 30 mA (human body safety current is 30 mA). When twice of the total leakage current of the system is greater than 30 mA, the system must be equipped with two or more leakage protectors.

#### 2.1.4 Electrostatic Discharge Safety

To prevent damage from static electricity, you must pay attention to the following:

- Properly ground the device and floor.
- Keep the indoor installation environment clean and free of dust.
- Maintain appropriate humidity conditions.
- Before installing a switch, wear an ESD wrist strap and make sure that it is well grounded.
- Avoid contact between the clothing and other items with the printed circuit board. The ESD wrist strap can only prevent damage to the printed circuit board caused by static electricity on the body. Static electricity on clothing cannot be prevented.

#### 2.1.5 Laser Safety

Among the modules supported by the switch, there are many transceiver modules that are Class I laser products.

- When a fiber transceiver works, ensure that the port has been connected with a fiber or covered by a dust cap to keep out dust and prevent it from burning your eyes.
- Do not stare at any fiber port.

#### 2.1.6 Storage Security

To ensure the normal operation of the device, maintain a proper storage environment in accordance with the storage temperature/storage humidity requirements in the technical specifications table of the corresponding device.

##### Caution

If the storage time exceeds 18 months, you must power on the device and keep it running for 24 hours without interruption for device activation.

## 2.2 Installation Environment Requirements

Install the switch indoors to ensure its normal operation and prolonged service life. The installation site must meet the following requirements.

### 2.2.1 Ventilation Requirements

Maintain a minimum clearance of 100 mm (3.94 in.) around the device for air circulation. After various cables are connected, bundle the cables or place them in the cable management bracket to avoid blocking air inlets.

### 2.2.2 Temperature/Humidity Requirements

To ensure the normal operation and prolonged service life of the switch, maintain an appropriate temperature and humidity in the equipment room. The equipment room with too high or too low temperature and humidity for a long period may damage the switch.

- In an environment with high relative humidity, the insulating material may have poor insulation or even leak electricity.
- In an environment with low relative humidity, static electricity is prone to occur and damage the internal circuits of the switch.
- Too high temperatures can accelerate the aging of insulation materials, greatly reducing the reliability of the switch and severely affecting its service life.

Temperature and Humidity

Temperature	Relative Humidity
0°C to 45°C (32°F to 113°F)	10% to 90% (non-condensing)

---

 **Note**

The ambient temperature and humidity of the switch are measured at the point that is 1.5 m (59.06 in.) above the floor and 0.4 m (15.75 in.) before the switch rack when there is no protective plate in front or at the back of the rack

---

### 2.2.3 Cleanliness Requirements

Dust poses a major threat to the switch. The indoor dust takes on a positive or negative static electric charge when falling on the switch, causing poor contact of the metallic joint. Such electrostatic adhesion may occur more easily when the relative humidity is low, not only affecting the service life of the switch, but also causing communication faults. The following table describes the requirements for the dust content and granularity in the equipment room.

Maximum Diameter (μm)	0.5	1	3	5
-----------------------	-----	---	---	---

<b>Maximum concentration (Particles/m<sup>3</sup>)</b>	1.4 x 10	7 x 10	2.4 x 10	1.3 x 10
--	----------	--------	----------	----------

Apart from dust, the salt, acid, and sulfide in the air in the equipment room must meet strict requirements. These harmful substances will accelerate metal corrosion and component aging. Therefore, the equipment room should be properly protected against the intrusion of harmful gases, such as sulfur dioxide, hydrogen sulfide, nitrogen dioxide, and chlorine gas.

Gas	Average (mg/m <sup>3</sup> )	Maximum (mg/m <sup>3</sup> )
Sulfur dioxide (SO <sub>2</sub> )	0.2	1.5
Hydrogen sulfide (H <sub>2</sub> S)	0.006	0.03
Nitrogen dioxide (NO <sub>2</sub> )	0.04	0.15
Ammonia (NH <sub>3</sub> )	0.05	0.15
Chlorine gas (Cl <sub>2</sub> )	0.01	0.3

#### 2.2.4 Anti-interference Requirements

The AP is susceptible to external interference by capacitive coupling, inductive coupling, electromagnetic waves, common impedance (ground) coupling, or conduction over power lines, signal lines and output lines. Note that:

- In a TN earthing system, use a 3-wire single-phase outlet that has a protective earth (PE) contact to allow the filter circuit in the device to eliminate interference from the power grid.
- The switch should be located far away from the large power radio launch pad, radar launch pad, and high-frequency large-current devices.
- Use EMI shielding such as shielded interface cables to minimize interference when necessary.
- Route interface cables only indoors to prevent signal ports from getting damaged by overvoltage or overcurrent caused by lightning strikes.

#### 2.2.5 Grounding Requirements

A proper grounding system is the basis for stable and reliable running and is indispensable for preventing lightning strikes and interference. Carefully check the grounding conditions at the installation site according to the grounding specifications, and complete grounding properly based on the actual situation.

##### Safe Grounding

Ensure that the rack and power distribution device are securely grounded when the switch uses the AC power supply. Otherwise, electric shock may occur when the insulation resistance between the power supply inside the switch and the chassis becomes small.

##### Lightning Grounding


The lightning protection system of facilities is standalone, and is composed of a lightning rod, a lower conductor, and a connector connected to the grounding system. The grounding system is usually used for power reference

grounding and safety grounding of the rack. Lightning grounding is required only for facilities and is not required for the switch.

### EMC Grounding

Grounding required for electromagnetic compatibility includes shielded grounding, filter grounding, noise and interference suppression, and level reference, which contribute to the overall grounding requirements. The grounding resistance should be smaller than 1 ohm. The back panel has one Grounding Stud.

**Figure 2-1 Grounding**

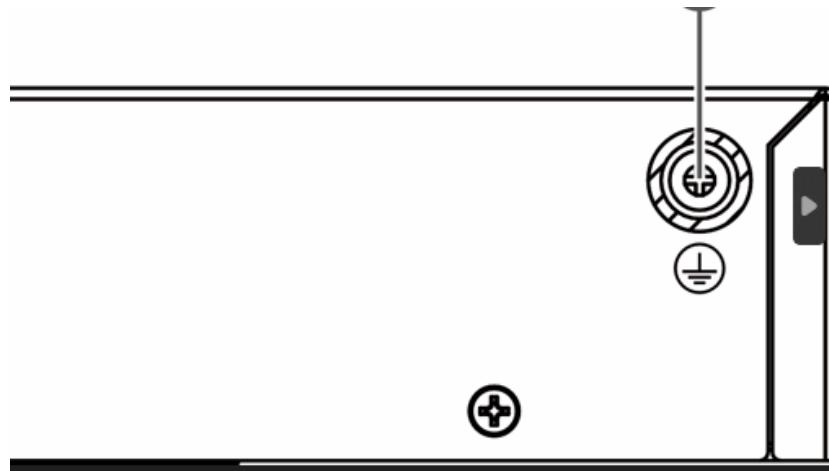

### 2.2.6 Lightning Protection Requirements

The external lightning protection cable row shall be used on the AC power port to prevent the switch from being struck by lightning when the AC power cord is introduced from the outdoor and directly connected to the power port of the switch. The port surge arrestor can be fixed with cable ties and screws on the rack, work bench or the wall on the equipment room. When a surge arrestor is being used, alternating current flows through the surge arrestor before entering the switch.

**i** **Note**

- Surge arrestors are customer supplied.
- For details of surge arrestors, see the related user guide.

### 2.2.7 EMI Requirements

All interference sources, either from outside or inside of the device or application system, affect the device by capacitive coupling, inductive coupling, or electromagnetic waves.

Electromagnetic interference (EMI) occurs due to electromagnetic radiation or conduction, depending on the transmission path.

When the energy, often RF energy, from a component arrives at a sensitive component via the space, the energy is known as radiated interference. The interference source can be both a part of the interfered system and a completely electrically isolated unit. Conduction interference occurs when interference is transferred from one unit to another unit through cables, which are usually electromagnetic wires or signal cables connected between

the source and the victim. Conducted interference often affects the power supply of the equipment, but can be controlled by a filter. Radiated interference may affect any signal path in the equipment, and is difficult to shield.

- Take interference prevention measures for the power supply system.
- Keep the switch far away from the lightening protection and grounding system of the power device.
- Keep the switch far away from high-frequency current devices such as high-power radio transmitting station and radar launcher.
- Take electromagnetic shielding measures when necessary.

## 2.3 Fiber-Optic Cable Connection Requirements

Make sure the model of the SFP module and fiber-optic cable matches the SFP port. The transmit port on the local device should be connected to the receive port on the peer device and vice versa.

## 2.4 Tools

<b>Common Tools</b>	Phillips screwdriver, related Ethernet and fiber-optic cables, bolts, diagonal pliers, cable ties
<b>Special Tools</b>	ESD gloves, wire stripper, crimping plier, RJ45 crimping plier, and wire cutter
<b>Cleaning Tools</b>	Dust-free paper, fiber end-face microscope
<b>Meters</b>	Multimeter, bit error rate tester (BERT), optical power meter

---

 **Note**

No tool kit is delivered with the RG-CS83 series switches.

---

# 3 Installing the Switch


The RG-CS83 series multi-GE switches must be installed indoors.



## Note

Ensure that requirements in Chapter 2 are all met.

## 3.1 Installing Procedure

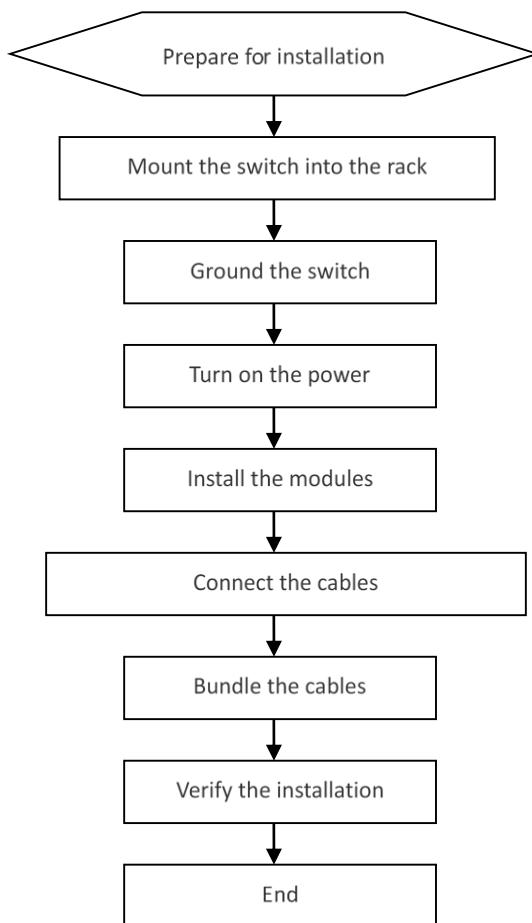

## 3.2 Before You Begin

Confirm the following requirements before installation:

- The installation site provides sufficient space for heat dissipation.
- The installation site meets the temperature and humidity requirements of the switch.
- The power supply and required current are available in the installation site.

- The Ethernet cables have been deployed in the installation site.

## 3.3 Mounting the Switch

### Notes


- Connect the power cords of different colors to the corresponding grounding posts.
- Ensure the power cords are securely connected.
- Do not place heavy objects on the switch.
- Maintain a minimum clearance of 100 mm (3.94 in.) around the device for air circulation.
- Keep the switch away from high-power radio stations, radar stations, and high-frequency high-current devices. Use EMI shielding such as shielded interface cables to minimize interference when necessary.
- Route interface cables only indoors to prevent signal ports from getting damaged by overvoltage or overcurrent caused by lightning strikes.

### 3.3.1 Mounting the Switch in a Rack


All models of the RG-CS83 series switches can be installed in a standard 19-in. four-post EIA rack. Mount the switch in the rack with the front panel face forward.

- (1) Use a Phillips-head screw driver to secure a bracket to each side of the switch with two screws.


**Figure 3-1 Securing Brackets**

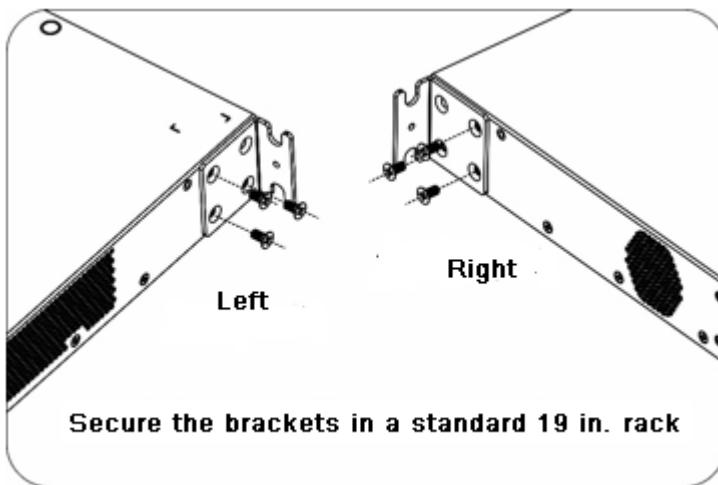


- (2) Install two cage nuts on the inside of each front rack and drive the screws halfway into the cage nuts.

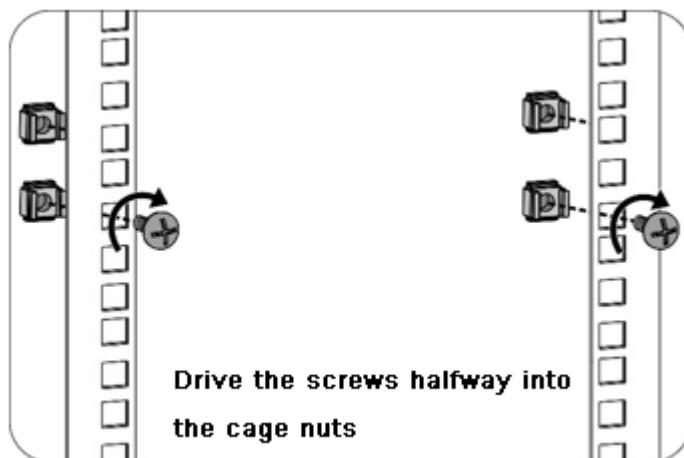**Figure 3-2** **Installing Cage Nuts and Screws**

(3) Secure the switch on the rack rails by tightening the screws.

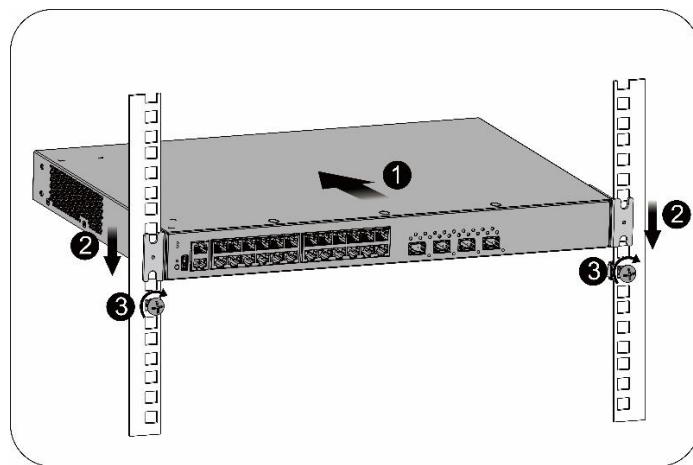**Figure 3-3** **Tightening Screws**

(4) Insert screws into the other two cage nuts and tighten them.

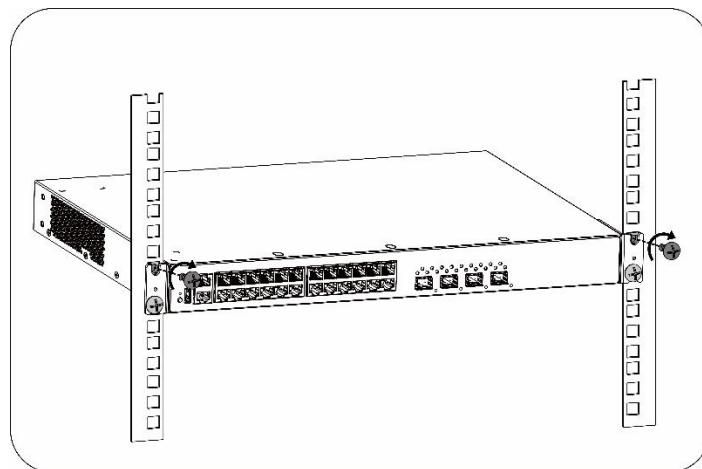**Figure 3-4** **Tightening Other Screws**

### 3.3.2 Installing the Switch on a Workbench

In most cases, users do not have a standard 19-inch rack. Therefore, the most popular method is to place the switch on a clean workbench.


- Attach the four rubber pads to the four corners on the bottom.
- Place the switch on the workbench to allow for adequate airflow.

### 3.3.3 Mounting the Switch on the Wall


The switch comes with mounting brackets. Among them, all versions of the RG-CS83-24GT4XS and RG-CS83-48GT4XS support wall-mounting. However, the RG-CS83-12GT4XS-P, RG-CS83-24GT4XS-P, and RG-CS83-48GT4XS-P of earlier versions of V100 do not support wall-mounting. The RG-CS83-12GT4XS-P, RG-CS83-24GT4XS-P, and RG-CS83-48GT4XS-P of V110 and later versions support wall-mounting. The installation process is as follows.

- (1) Rotate the brackets by 90 degrees and secure the brackets to the switch by using the screws.

**Figure 3-5 Securing Brackets**

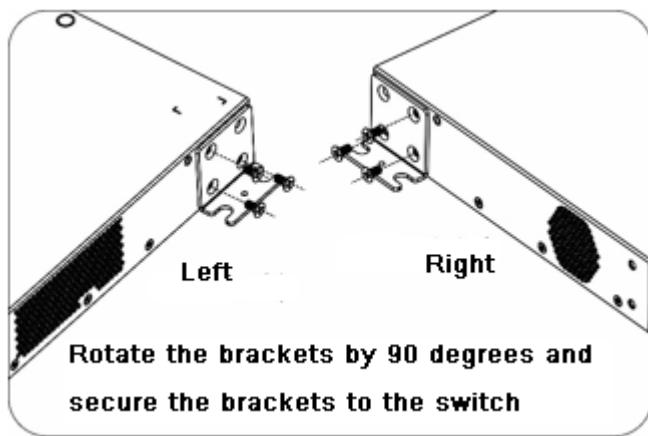

- (2) Secure the switch by using the expansion bolts.

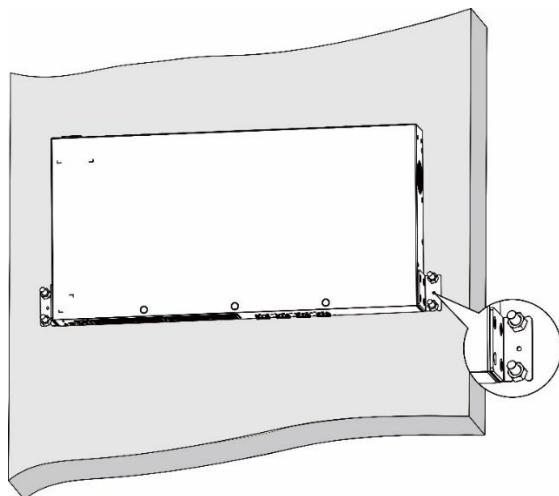**Figure 3-6 Securing the Switch****⚠ Caution**

When the switch is installed against a wall, it can only be installed with the front panel facing downwards.

### 3.4 Grounding the Switch

Connect the PGND to the grounding lug of the rack and then connect the grounding lug to the grounding bar of the equipment room.

**Notes**

- The sectional area of the grounding wire should be determined according to the possible maximum current. Cables of good conductor should be used.
- Do not have bare wires exposed
- Grounding resistance: Less than 1 ohm.

**⚠ Caution**

- To guarantee the security of the person and the device, the switch must be grounded properly. The grounding resistance between the chassis and the ground should be less than 1ohm.
- The maintenance personnel should check whether the AC socket is reliably connected to the protective ground of the building. If not, the maintenance personnel should use a protective earth conductor from the AC outlet protective earth terminal to the building protective earth.
- The power socket should be installed near the device and easily accessible.
- The AC power should be connected to an output socket with a ground connection using a power cord.
- When installing the switch, connect the grounding first and disconnect it last.

### 3.5 Connecting Cables

**Notes**

- Distinguish single-mode and multi-mode fiber-optic cables and ports.

- Avoid a small bend radius at the connector.
- The Ethernet cable type must be consistent with the "specifications" in this manual.

#### Bending Steps

- (1) Connect the RJ45 connector of an Ethernet cable to the Ethernet port on the device, and the other end to a PC. Alternatively, you can connect one end of a standard RJ45 serial cable to the serial port of the device card and the other end to the network management or control terminal device.
- (2) Insert the single-mode or multi-mode fiber into the corresponding interface according to the panel identification, and distinguish the transmitting and receiving ends of the fiber-optic cable.
- (3) Insert the twisted pair cable with RJ45 connector into the corresponding interface according to the panel identification, and distinguish the crossover cable and the straight cable.

## 3.6 Cable Bundling

#### Notes

- The power cords and other cables should be bundled in a visually pleasing way.
- When you bundle fibers, make sure that the fibers at the connectors have natural bends or bends of large radius.
- Do not bundle fibers and twisted pairs too tightly, as this may press hard the fibers and affect their useful life and transmission performance.

#### Bundling Steps

- (1) Bind the drooping part of the fiber-optic cables and twisted pairs of each board, and lead them to both sides of the chassis for convenience.
- (2) On the both sides of the chassis, fasten the fibers and twisted pairs to the cable management ring or cabling chute.
- (3) For the power cords, you should bundle them closely along the bottom of the chassis, in a straight line wherever possible.

## 3.7 Verifying Installation

---

#### Caution

Please turn off the power to avoid personal injury and damage to components caused by incorrect connection.

---

- Verify that the ground wire is connected.
- Verify that the cables and power input cables are properly connected.
- Verify that interface cables are routed indoors. If not, check whether the power supply and interfaces are protected from lightning strikes.
- Maintain a minimum clearance of 100 mm (3.94 in.) around the device for air circulation.


# 4 Verifying Operating Status

## 4.1 Setting up Configuration Environment

### Setting up Configuration Environment

Connect the PC to the console port of the switch with an Ethernet cable.

Figure 4-1 Configuring Environment

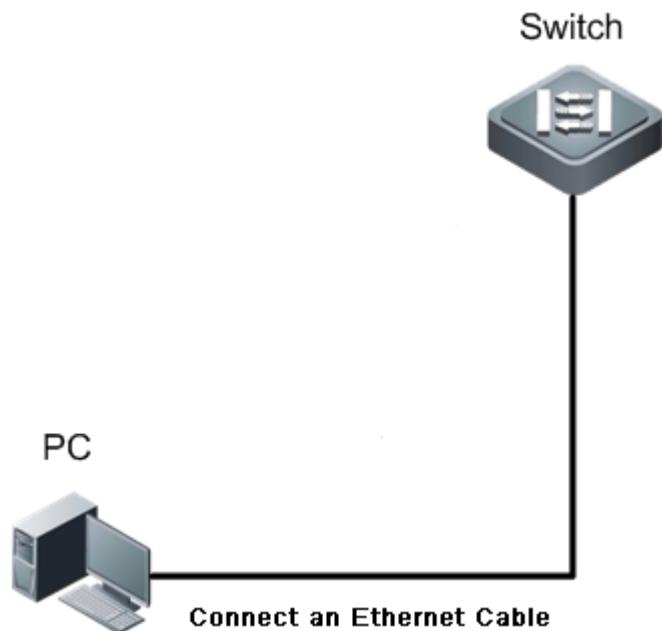


### Connecting an Ethernet Cable

- Plug the crystal head of the Ethernet cable into the network port of the PC.
- Connect the RJ-45 end to the Console port on your AC.

### Setting Parameters


- Start the PC and run the terminal simulation program on your PC, for example, PuTTY of Windows 95/98/NT/2000/7/8/10.
- Setting terminal parameters. Baud rate: 9600; Data bit: 8; Parity check: None; Stop bit: 1; Flow control: None. Follow the steps below to set the parameters.
  - (1) Navigate to **Start > PuTTY** and select **HyperTerminal**. The **Location Information** dialog box will appear.

Figure 4-2

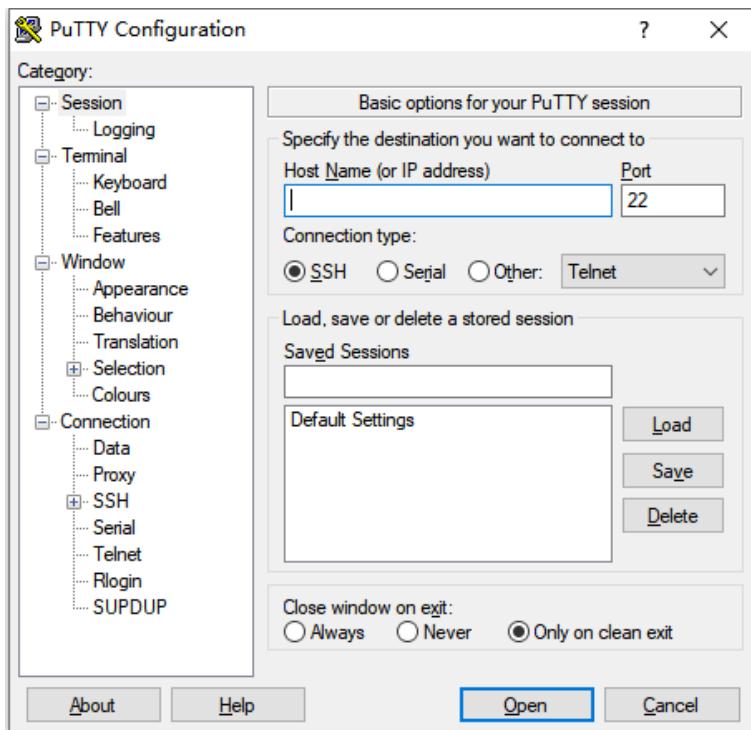


(2) Select **Serial**, and enter the serial port in **Serial line** and baud rate in **Speed**.


Figure 4-3

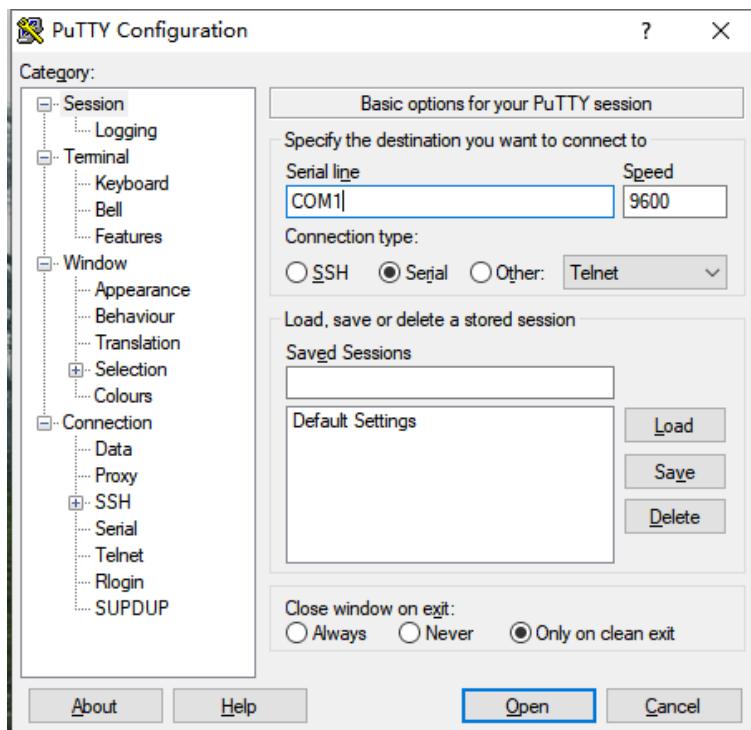

(3) Select **Serial**. The serial port parameter setting page is displayed. Set **Speed** to **9600**, **Data bits** to 8, **Stop bits** to 1, **Parity** to **None**, and **Flow control** to **None**.

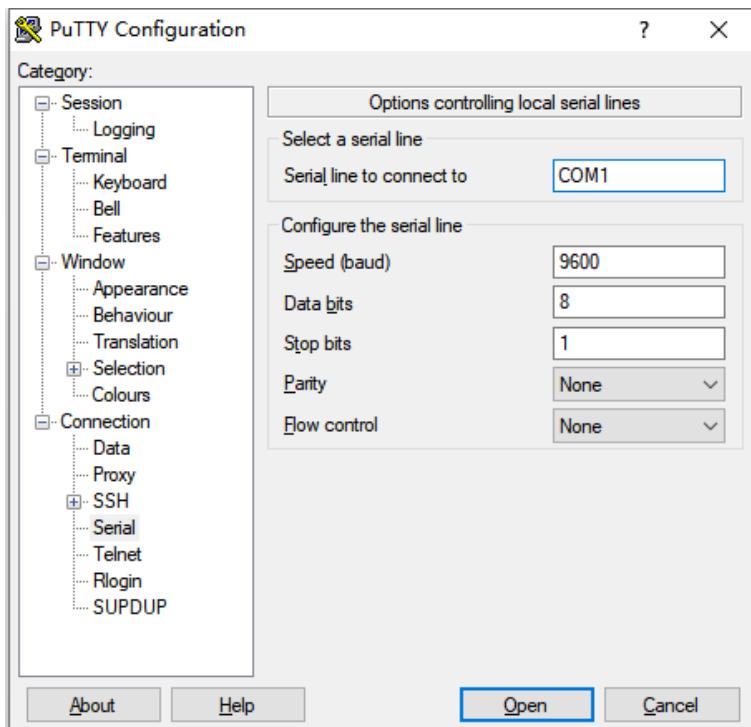**Figure 4-4**

(4) Click **Open** and the **HyperTerminal** window will appear.

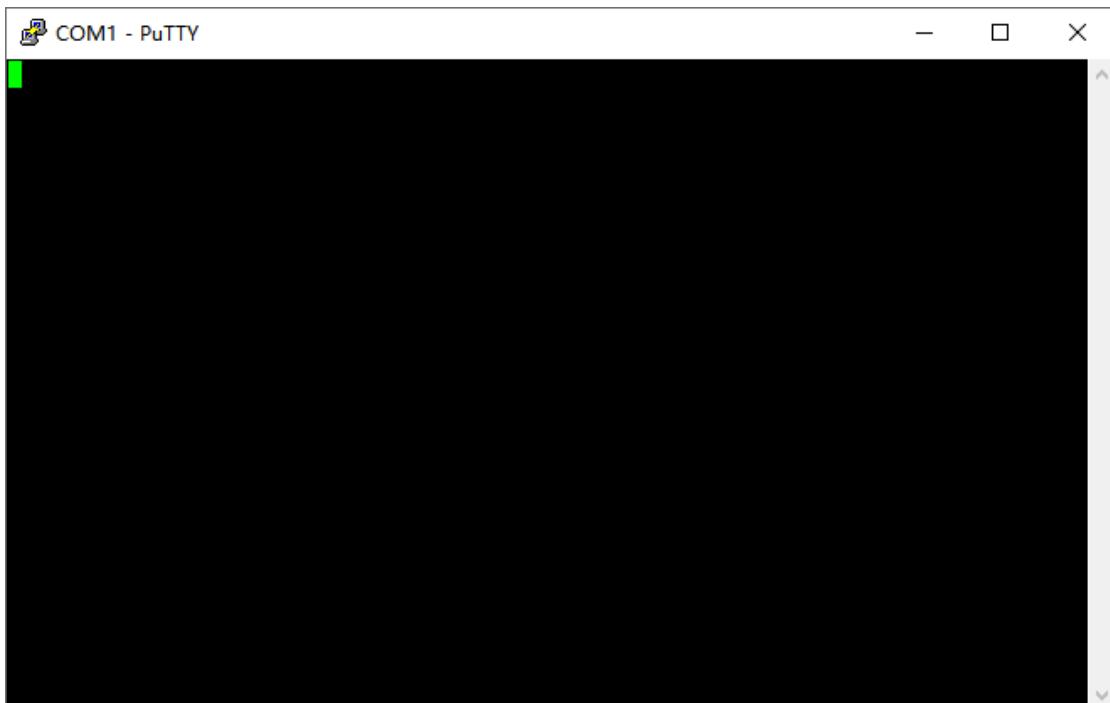

## 4.2 Powering on Switch

### Checklist before Power-on

- The switch is fully grounded.
- The power cord is properly connected.
- The power cord retention clip secures the input power cord to the power supply.
- The power supply voltage complies with the requirement of the switch.
- The Ethernet cable is properly connected. The terminal (it can be a PC) used for configuration is already started. The parameters are already configured.

**Checklist after Power-on (Recommended)**

After power-on, check the following:

- Check the information on the terminal interface.
- Check the LED status.
- Monitoring and Maintenance

# 5 Monitoring and Maintenance

## 5.1 Monitoring

### LED

When the switch is running, you can monitor the module status by observing the module LED.

- If the SYS indicator is red, it indicates that the system is faulty. Log in to the web-based management system to troubleshoot the fault.
- If the SYS indicator is yellow, it indicates that the system temperature reaches the warning value. This case may affect the system performance, but the system can continue working. Log in to the web-based management system to troubleshoot the fault.
- For example, if the Status LED keeps blinking or turns red, it indicates the switch is faulty. You are advised to identify the fault cause, and power off the switch when necessary.

---

#### Caution

If the Status LED keeps blinking during device positioning, it is not a fault symptom.

---

### CLI Commands

You can run the CLI commands to monitor system status, including:

- System status
- Port configuration and status
- Fan and power supply status
- System temperature

---

#### Note

For the monitoring commands, see RG-CS83 Series Switches Configuration Guide.

---

## 5.2 Maintenance

### Cooling System Maintenance

- If the fan module fails, an alarm will be generated.
- To replace the fan module, contact technical support personnel.

### Power Supply Module Maintenance

To replace the power module, contact technical support personnel.

### Replacing Lithium Battery

The device has a built-in lithium battery to maintain the real-time clock without external power to the switch.

To replace the lithium battery, contact technical support personnel.

---

**⚠ Caution**

- Replacing the battery with the wrong type may cause explosion or danger. If the battery is damaged, please replace it with the same type.
- Exposing the battery to extremely high temperatures and/or extremely low air pressure may cause the battery to explode or leak flammable liquids or gases.
- Throwing the battery into a fire or oven, or mechanically crushing or cutting it may cause the battery to explode.


---

**Replacing Fuses**

To replace fuses, contact technical support personnel. The technical support personnel will select fuses of the same specifications for replacement.

# 6 Troubleshooting

## 6.1 Troubleshooting Flowchart

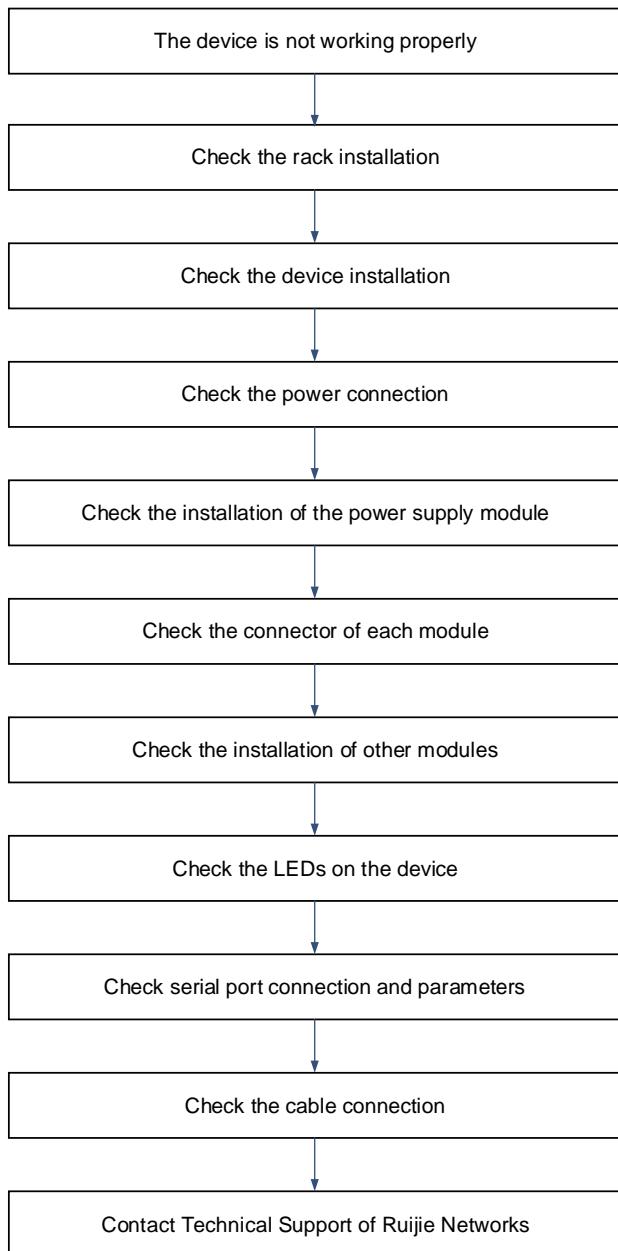

## 6.2 Troubleshooting

### Fault 1: The login password is forgotten.

#### Symptom

Failed to log into the system.

**Suggested Action**

Please contact Ruijie technical support.

**Fault 2: The AC power module does not work.****Symptom**

All LEDs on the front panel are off. The fan status LED is off.

The power supply status LED is off. The fan does not rotate.

**Suggested Action**

- (1) Unplug the power cord from the power supply module.
- (2) Check whether the power cord is securely connected to the power socket.
- (3) Check whether the power cord is securely connected to the power supply module.
- (4) Check whether the power supply module is securely seated. If necessary, pull out the power supply module and check its connector.

**Fault 3: The serial port console has no output.****Symptom**

After the system is started, the serial port console does not display any information.

**Suggested Action**

- (1) Check the serial cable.
- (2) Ensure that the connected serial port is consistent with what is configured on the HyperTerminal.
- (3) Check whether the configuration of the serial port on the HyperTerminal is consistent with that in Configuration Guide.
- (4) If there is still no output on the serial port, please contact Ruijie technical support.

**Fault 4: The serial port console output is garbled.****Symptom**

The serial port console output is garbled.

**Suggested Action**

The fault is related to the serial port configuration. Check the baud rate configuration is consistent with that in Configuration Guide.

**Fault 5: The link cannot be set up on the fiber port.****Symptom**

After the SFP module is inserted into the fiber port with the optical cable plugged in, the link cannot be set up on the optical port.

**Suggested Action**

Check whether it is a combo port. If so, configure the port to work in optical port mode. Then take the following steps:

- (1) Check whether the receiving end and transmitting end are reversed. The transmitting end of a fiber port must be connected to the corresponding receiver at the other end. You can confirm both ends by exchanging the connection order of two fiber-optic cables.

- (2) Check whether the wavelength values of the SFP modules on the two sides are consistent. For example, an SFP module with a wavelength of 1310 nm cannot be connected to an SFP module of 1550 nm.
- (3) Check whether the distance between the two sides exceeds the maximum length marked on the SFP module.
- (4) Check whether the speeds of the two sides match and whether the optical fiber type meets requirements.

#### **Fault 6: Some Ports Cannot Provide PoE Power**

##### **Symptom**

When line card ports are connected to a PoE device, some ports cannot supply power.

##### **Suggested Action**

Check whether the non-powered ports are manually disabled through software.

Check whether the PoE power is sufficient. If not, only the high-priority port can supply power.

# 7 Appendix

## 7.1 Connectors and Media

### 1000BASE-T/100BASE-TX/10BASE-T

The 1000BASE-T/100BASE-TX/10BASE-T is a 10/100/1000 Mbps auto-negotiation port that supports auto MDI/MDIX Crossover.

Compliant with IEEE 802.3ab, 1000BASE-T requires Category 5e 100-ohm UTP or STP (STP is recommended) with a maximum distance of 100 meters (328 feet).

1000BASE-T requires all four pairs of wires be connected for data transmission.

**Figure 7-1 1000BASE-T Connection**

Straight-Through		Crossover	
Switch	Switch	Switch	Switch
1TP0+	1TP0+	1TP0+	1TP0+
2TP0-	2TP0-	2TP0-	2TP0-
3TP1+	3TP1+	3TP1+	3TP1+
6TP1-	6TP1-	6TP1-	6TP1-
4TP2+	4TP2+	4TP2+	4TP2+
5TP2-	5TP2-	5TP2-	5TP2-
7TP3+	7TP3+	7TP3+	7TP3+
8TP3-	8TP3-	8TP3-	8TP3-

10BASE-T uses Category 3, 4, 5 100-ohm UTP/STP and 1000BASE-T uses Category 5 100-ohm UTP/STP for connections. Both support a maximum length of 100 meters.

[Table 7-1](#) shows 100BASE-TX/10BASE-T pin assignments.

**Table 7-1 100BASE-TX/10BASE-T Pin Assignments**

Pin	Socket	Plug
1	Input Receive Data+	Output Transmit Data+
2	Input Receive Data-	Output Transmit Data-
3	Output Transmit Data+	Input Receive Data+
6	Output Transmit Data-	Input Receive Data-
4, 5, 7, 8	Not Used	Not Used

[Figure 7-2](#) shows wiring of straight-through and crossover cables for 100BASE-TX/10BASE-T.

**Figure 7-2 100BASE-TX/10BASE-T Connection**

Straight-Through	Crossover
Switch 1 IRD+ —————→ 1 OTD+ 2 IRD- —————→ 2 OTD- 3 OTD+ —————→ 3 IRD+ 6 OTD- —————→ 6 IRD-	Switch 1 IRD+ —————→ 1 OTD+ 2 IRD- —————→ 2 OTD- 3 OTD+ —————→ 3 OTD+ 6 OTD- —————→ 6 OTD-

**Fiber Connection**

You can choose single mode or multimode fibers according to the module types.

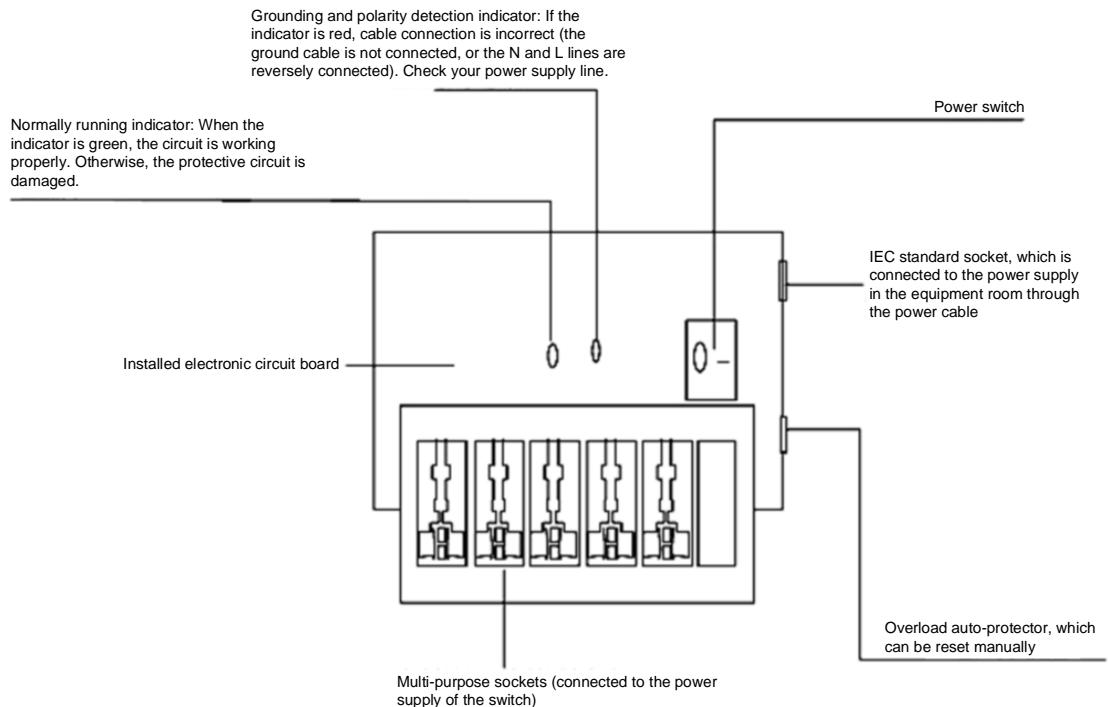
[Figure 7-3](#) shows connection of fiber-optic cable.

**Figure 7-3 Fiber-Optic Cable Connection**

## 7.2 Lightening Protection

**Installing AC Power Arrester (Lightning Protection Power Strip)**

The AC power port must be connected to an external lightning protection power strip to prevent the switch from being struck by lightning when the AC power cord is introduced from the outdoor and directly connected to the power port of the switch. The lightning protection power strip can be fixed on the rack, workbench, or wall in the equipment room by using cable ties and screws. AC power enters the lightening protection power strip and then gets to the switch.

**Figure 7-4 Power Arrester**

### **Caution**

- The power arrester is not delivered with the switch. Please purchase it based on actual requirements.
- Make sure that the PE terminal of the power arrester is well grounded.
- After the AC power plug of the switch is connected to the socket of the power arrester (lightning protection power strip), the lightning protection function is implemented only if the RUN indicator is green and the ALARM indicator is OFF.
- If the ALARM indicator on the power arrester is red, check whether it is caused by poor grounding connection or by the reversed connection of the Null and Live lines. The detection method is as follows: Use a multimeter to measure the polarity of the power socket for the arrester when the indicator is red. If the N line is on the left and the L line is on the right (facing the socket), the arrester's PE terminal is not grounded. If not, the polarity of the arrester power cord should be reversed. In this case, you should open the power arrester and rectify the polarity of the connection. If the indicator is still red, the arrester's PE terminal has not been grounded.

### **Installing the Ethernet Port Arrester**

Please connect an Ethernet port arrester to the switch to prevent the damage by lightning before connecting an outdoor Ethernet cable to the switch.


Tools: Phillips screwdrivers or flat-head screwdriver, multimeter, and diagonal pliers

Installation Steps:

- (1) Tear one side of the protective paper for the double-sided adhesive tape and paste the tape to the housing of the Ethernet port arrester. Tear the other side of the protective paper for the double-sided adhesive tape and paste the Ethernet port arrester to the switch housing. The paste position for the Ethernet port arrester should be as close to the ground terminal of the switch as possible.

- (2) Based on the distance between the switch ground terminal and the Ethernet port arrester, cut the ground cable for the Ethernet port arrester and firmly tighten the ground cable to the ground terminal of the switch.
- (3) Use a multimeter to check whether the ground cable for the arrester is in good contact with the ground terminal and the housing of the switch.
- (4) Connect the arrester by using an adapter cable (note that the external Ethernet cable is connected to the IN end, while the adapter cable connected to the switch is connected to the OUT end) and check whether the service module indicator is normal.
- (5) Use a nylon cable tie to bundle the power cords.

**Figure 7-5 Ethernet Port Arrester Installation**

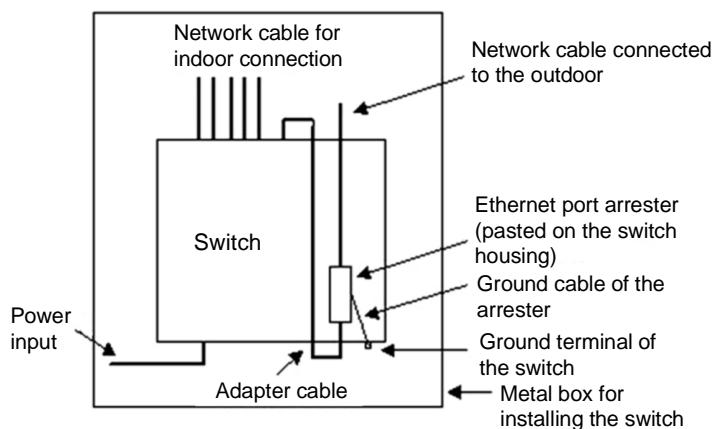

**⚠ Caution**

- The Ethernet port arrester is only for the 10M/100M copper ports with an RJ-45 connector.
- The Ethernet port arrester is not delivered with the switch. Please purchase it based on actual requirements.
- Pay attention to the following conditions during the actual installation to avoid affecting the performance of the Ethernet port arrester:
  - Reversed installation direction of the arrester. Connect the external Ethernet cable to the **IN** end and connect the Ethernet port of the switch to the **OUT** end.
  - Poor grounding of the arrester. The ground cable of the arrester should be as short as possible to ensure that it is in good contact with the ground terminal of the switch. Use a multimeter to confirm the contact condition after the grounding.
  - Incomplete arrester installation. If there is more than one port connected to the peer device on the switch, arresters need to be installed on all connection ports for the purpose of lightning protection.

## 7.3 Cabling

When the switch is installed in a standard 19-inch rack, secure the cables around the cable management brackets. Top cabling or bottom cabling is adopted according to the actual situation in the equipment room. All transferred cable connectors should be placed at the bottom of the rack in an orderly manner instead of outside

the rack that is easy to touch. Power cords are routed beside the rack, and top cabling or bottom cabling is adopted according to the actual situation in the equipment room, such as the positions of the DC power distribution box, AC socket, or lightning protection box.

#### Requirements for Cable Bend Radius

- The bend radius of a fixed power cord, Ethernet cable, or flat cable should be over five times greater than their respective diameters. The bend radius of these cables that are often bent or plugged should be over seven times greater than their respective diameters.
- The bend radius of a fixed common coaxial cable should be over seven times greater than its diameter. The bend radius of the common coaxial cable that is often bent or plugged should be over 10 times greater than its diameter.
- The bend radius of a fixed high-speed cable (such as SFP+ cable) should be over five times greater than its diameter. The bend radius of the fixed high-speed cable that is often bent or plugged should be over 10 times greater than its diameter.


#### Requirements for Fiber Bend Radius

- The diameter of a fiber tray to hold fibers should be over 25 times greater than the diameter of the fiber.
- When an optical fiber is moved, the bend radius of the fiber should be over 20 times greater than the diameter of the fiber.
- During cabling of an optical fiber, the bend radius of the fiber should be over 10 times greater than the diameter of the fiber.

#### Precautions for Bundling up Cables

- Before cables are bundled, mark labels and stick the labels to cables wherever appropriate.
- Cables should be neatly and properly bundled in the rack without twisting or bending.


**Figure 7-6 Binding Cables (1)**

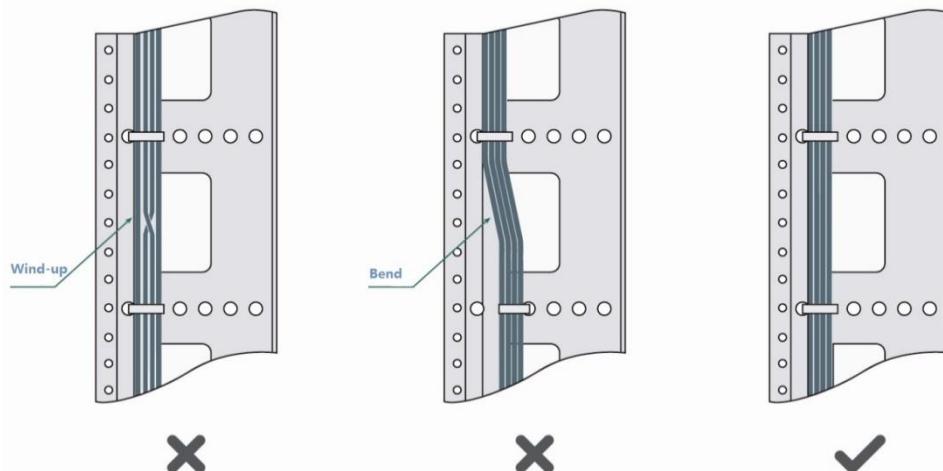

- Cables of different types (such as power cords, signal cables, and ground cables) should be separated in cabling and bundling. Mixed bundling is disallowed. When they are close to each other, it is recommended to adopt crossover cabling. In the case of parallel cabling, maintain a minimum distance of 30 mm (1.18 in.) between power cords and signal cables.


- The cable management brackets and cabling troughs inside and outside the rack should be smooth without sharp corners.
- The metal hole traversed by cables should have a smooth and fully rounding surface or an insulated lining.
- Use cable ties to bundle up cables properly. Please do not connect two or more cable ties to bundle up cables.
- After bundling up cables with cable ties, cut off the remaining part. The cut should be smooth and trim, without sharp corners.

**Figure 7-7 Binding Cables (2)**

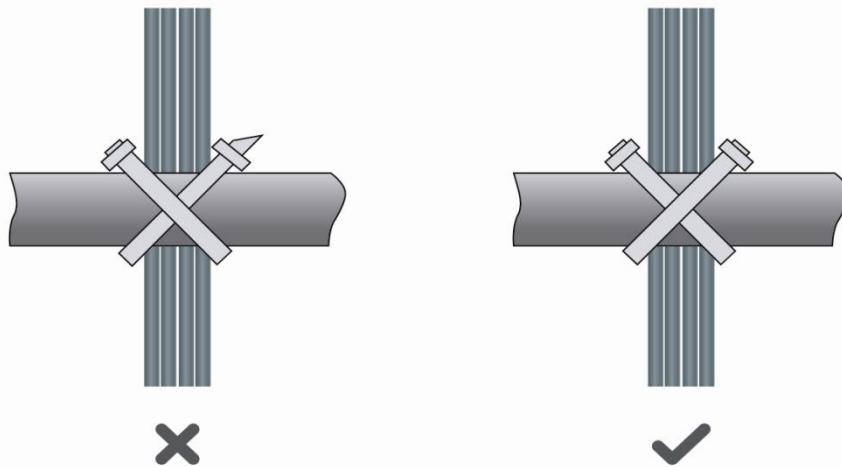

- When cables need to be bent, please bundle them up but do not tie them where the cables will be bent. When cables need to be bent, please bundle them up but do not tie them where the cables will be bent.

**Figure 7-8 Binding Cables (3)**

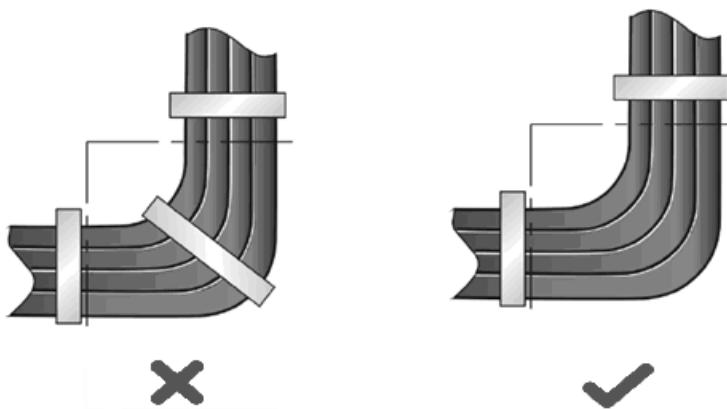


- Cables not to be assembled or remaining parts of cables should be folded and placed in a proper position of the rack or cable trough. The proper position refers to a position that does not affect device running or damage the switch or cable.
- 220 V and -48 V power cords must not be bundled on the guide rails of moving parts.
- The power cords connecting moving parts such as door grounding wires should be reserved with some access after being assembled to avoid suffering tension or stress. After the moving part is installed, the

remaining cable part should not touch heat sources, sharp corners, or sharp edges. If heat sources cannot be avoided, high-temperature cables should be used. If heat sources cannot be avoided, high-temperature cables should be used.

- When screw threads are used to fasten cable terminals, the bolt or screw must be tightly fastened, and anti-loosening measures should be taken.

**Figure 7-9 Cable Fastening**

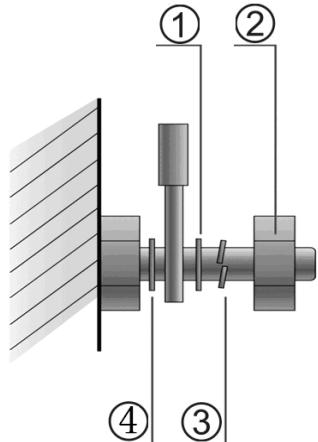

- (1) Flat washer
- (2) Nut
- (3) Spring washer
- (4) Flat washer

- Hard power cords should be fastened in the terminal connection area to prevent stress on terminal connection and cable.
- Do not use self-tapping screws to fasten terminals.
- Power cords of the same type and in the same cabling direction should be bundled up into cable bunches, with cables in cable bunches clean and straight.
- Bundle up cables by using cable ties.

**Table 7-2 Bundle up Cables Using Cable Ties**

Cable Bunch Diameter	Distance between Every Binding Point
10 mm (0.39 in.)	80 mm to 150 mm (3.15 in. to 5.91 in.)
10 mm to 30 mm (0.39 in. to 1.18 in.)	150 mm to 200 mm (5.91 in. to 7.87 in.)
30 mm (1.18 in.)	200 mm to 300 mm (7.87 in. to 11.81 in.)

- No knot is allowed in cabling or bundling.
- For wiring terminal blocks (such as circuit breakers) with cord end terminals, the metal part of the cord end

terminal should not be exposed outside the terminal block when assembled.

## 7.4 Site Selection

- The equipment room should be at least 5 km away from heavy pollution sources, such as the smelter works, coal mine, and thermal power plant. The equipment room should be at least 3.7 km away from medium pollution sources, such as the chemical factory, rubber factory, and electroplating factory. The equipment room should be at least 2 km away from light pollution sources, such as the food factory and leather plant. If the pollution source is unavoidable, the machine room should be located on the windward side of the pollution source perennially with advanced protection.
- The equipment room should be at least 3.7 km away from the sea or salt lake. Otherwise, the equipment room must be sealed, with air conditioner installed for temperature control. Saline soil cannot be used for construction. Otherwise, you should select devices with advanced protection against severe environment.
- Do not build the equipment room in the proximity of livestock farms. Otherwise, the machine room should be located on the windward side of the pollution source perennially. The previous livestock house or fertilizer warehouse cannot be used as the machine room.
- The machine room should be firm enough to withstand severe weather conditions such as windstorm and heavy rain as well as away from dust. If the dust is unavoidable, keep the door and window away from the pollution source.
- Otherwise, the machine room should meet the construction standard in terms of noise.
- Make sure the air vent of the machine room is away from the sewage pipe, septic tank, and sewage treatment tank. Keep the machine room under positive pressure to prevent corrosive gas from entering the machine room to corrode components and circuit boards.
- Keep the machine room away from industrial boiler and heating boiler.
- The machine room should be on the second floor. Otherwise, the machine room floor should be 600 mm (23.62 in.) higher than the highest flood level ever recorded.
- Make sure there are no cracks or holes in the wall and floor. If there are cable entries in the wall or window, take proper sealing measures. Ensure that the wall is flat, wear-resistant, and dust-free, which should be up to the standard for flame retarding, soundproofing, heat absorption, dust reduction, and electromagnetic shielding.
- Keep the door and the window closed to make the machine room sealed.
- The steel door is recommended for soundproofing.
- Sulfur-containing materials are forbidden.
- Keep the air conditioner from blowing wind straight toward the device or blowing water drops from the window or air vent toward the device.