

## SAFEVIEW™ STATUS

GREEN LED			NORMAL OPERATION	
Coax Link	Off	No power		
	Blink	No data link		
	On	Full data link		
Ethernet Link/Activity	Off	No network connection		
	On	Ethernet link active		
	Blink	Network activity		
POE over Coax	Off	HIGHWIRE Powerstar not detected		
	On	POE over Coax enabled		
POE to Camera	Off	POE device not detected		
	On	POE enabled to device		
Maximum POE Power Available	Off	No POE available		
	On	5W to 25W as indicated		
	Blink	Less than 5W available		

## WARNING INDICATORS

RED LED



ORANGE LED



Coax Link

Red/  
Orange

Data rate <100%

Ethernet Link/Activity

Red

10Base-T connection

POE over Coax

Red

(1 Blink) Low voltage  
(2 Blanks) Short circuit  
(3 Blanks) Overload

POE to Camera

Orange

Low voltage

Red

(Blink), No POE

Red

POE disconnected

Red

Overload

Maximum POE Power Available

Orange

(Flashing) Near power limit

Red


At power limit

## SAFEVIEW™ NOTES

Always check the SAFEVIEW™ status LEDs and power gauge on installation. This displays the link status and the actual power available for the powered device, measured for the actual cable type, length, quality and power source. It is calculated automatically on connection.

If installing a PTZ IP camera, or any other device whose power requirement changes during operation, check the SAFEVIEW™ LEDs when the device is drawing maximum power.

For maximum POE over Coax, use the recommended Veracity 57V PSU (VPSU-57V-800) to power the Base device. If more power is required than the cable can transmit, use a 57V PSU to power the HIGHWIRE Powerstar Camera device.

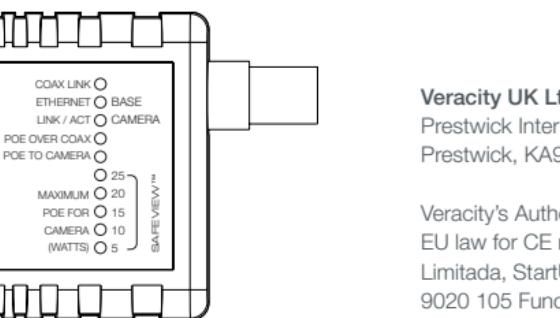

## SURGE PROTECTION

### Surge Protection

All Veracity products have been independently tested to verify their resilience to the stringent immunity levels of international standards. Users should note that no electronic equipment can be guaranteed to be completely protected at levels beyond the defined standard; therefore product warranty cannot include

interference that may cause undesired operation.

*NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.*

It is the user's responsibility to implement relevant surge protection measures, as appropriate to the installation. This may include the fitting of additional surge protection devices where required.

*This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.*



© Veracity UK Ltd 2025 QSG DV2.2 EN  
HIGHWIRE Powerstar is a registered trademark of Veracity UK Ltd



## FCC CERTIFICATION

VHW-HWPS-B, VHWV-HWPS-C

## QUICKSTART GUIDE

Ethernet & POE over Coax Adaptor  
**HIGHWIRE®**  
POWERSTAR



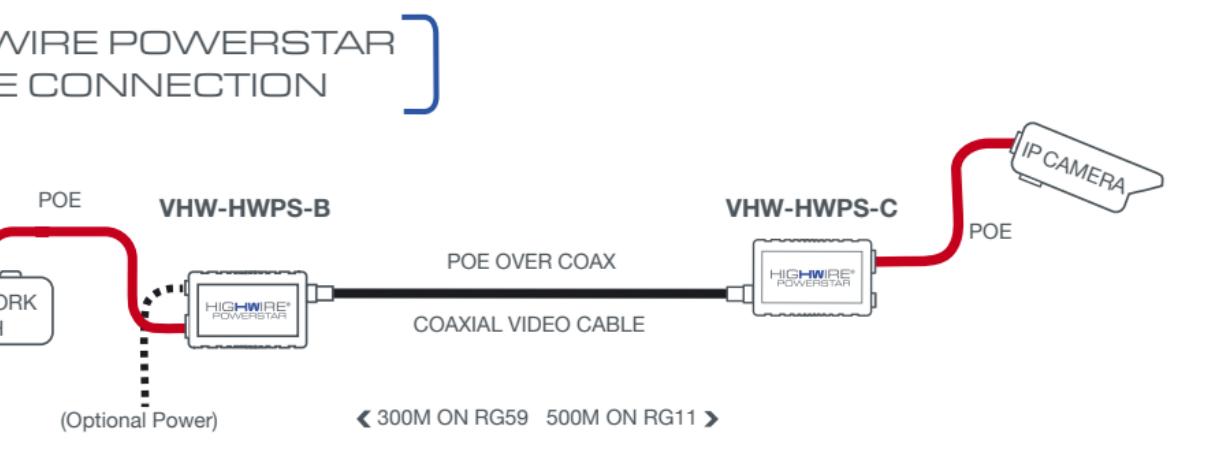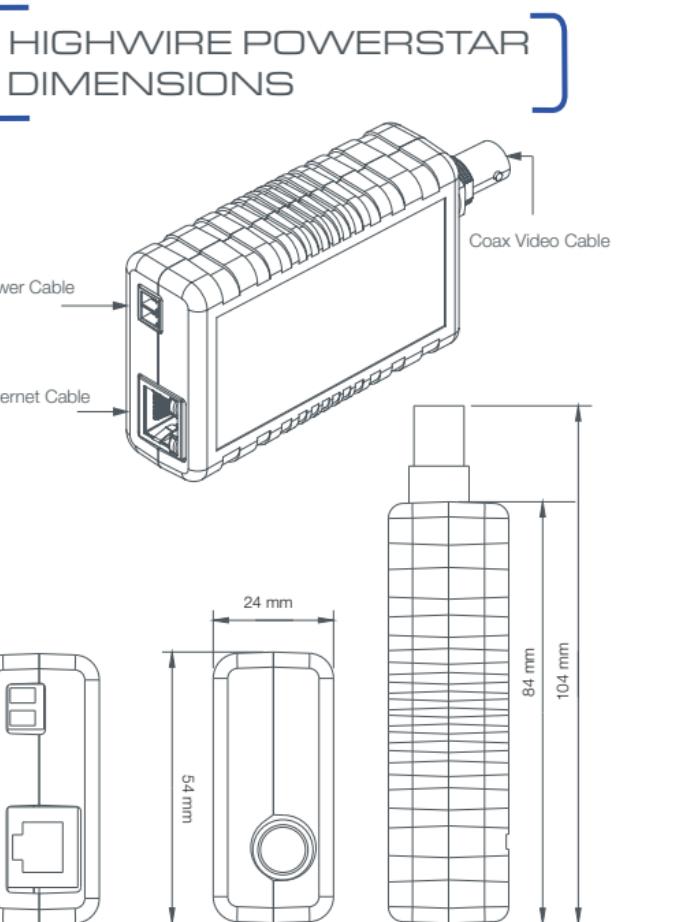

- HIGHWIRE Powerstar Base and Camera devices are used together to adapt conventional Ethernet to a signal, with POE, that can be carried by coaxial video cables such as RG59.
- HIGHWIRE Powerstar makes it possible to swap installed analogue cameras for high resolution digital IP cameras without the expense of replacing existing coax cabling.
- The HIGHWIRE Powerstar Base device may be powered by a POE switch or, for maximum power delivery, by a Veracity 57V DC power supply.

## MOUNTING HIGHWIRE

- The HIGHWIRE unit should only be installed indoors or in an appropriately rated enclosure.
- Both Base and Camera devices should be securely mounted and should not be supported by the attached cables.
- Once powered, the HIGHWIRE Powerstar Base device will automatically deliver POE over the coax to the HIGHWIRE Powerstar Camera device and from there to the IP camera or PD.

## HIGHWIRE CONNECTION

- Network communication over the HIGHWIRE to HIGHWIRE coax link is automatically established after power-up and is unrestricted and transparent to all network traffic.

## POWER CONNECTION

- The HIGHWIRE Powerstar Base device may be powered through the RJ45 port by a POE switch (802.3af or 802.3at) or injector, but for

maximum power, a separate 57V DC PSU should be used (VPSU-57V-800). Other PSUs are available for powering multiple Base devices.

- Connect the 57V PSU using the detachable screw terminal connector, observing the correct +/- polarity. The POE input is disabled if the external PSU is connected.

- As an option, for maximum possible power delivery to the powered device, the HIGHWIRE Powerstar Camera device may be powered locally at the camera end by an external 57V DC power supply (VPSU-57V-800).
- POE input from the coax is disabled if the external PSU is connected. In this case, a standard non-POE HIGHWIRE can be used at the Base end.

## ETHERNET CONNECTIONS

- Standard Ethernet cables may be used to connect the Base HIGHWIRE Powerstar to the switch and from the Camera HIGHWIRE Powerstar to the IP camera or other device.

- Both path and crossover type Cat5 and Cat6 cables are supported.

- PD = Power Device