

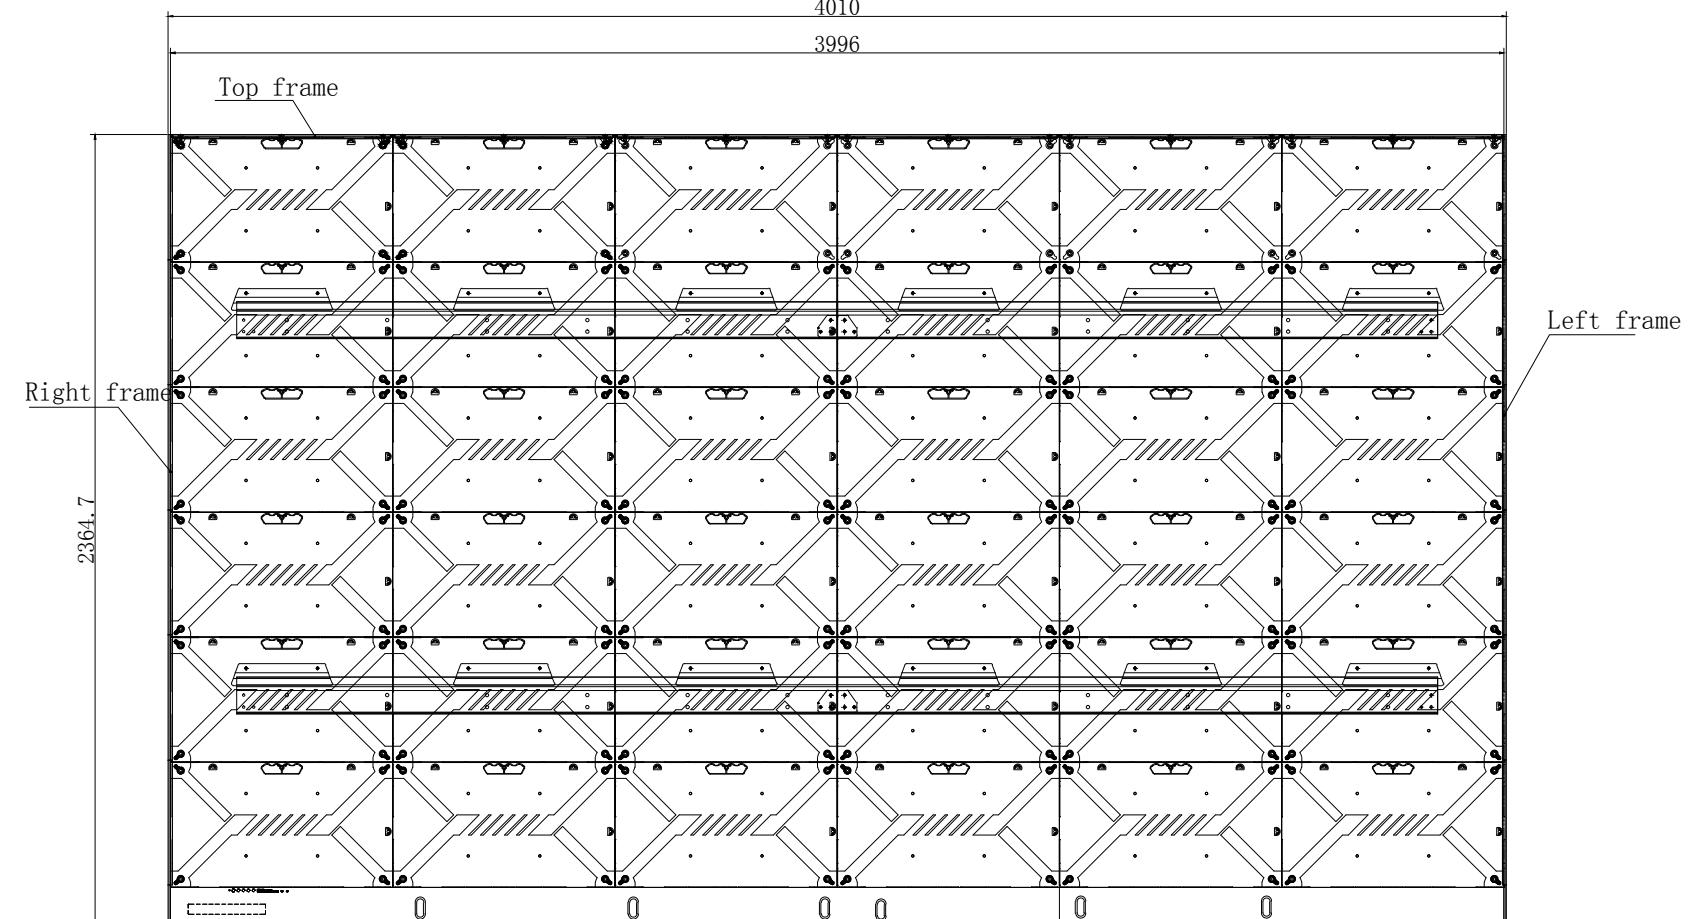
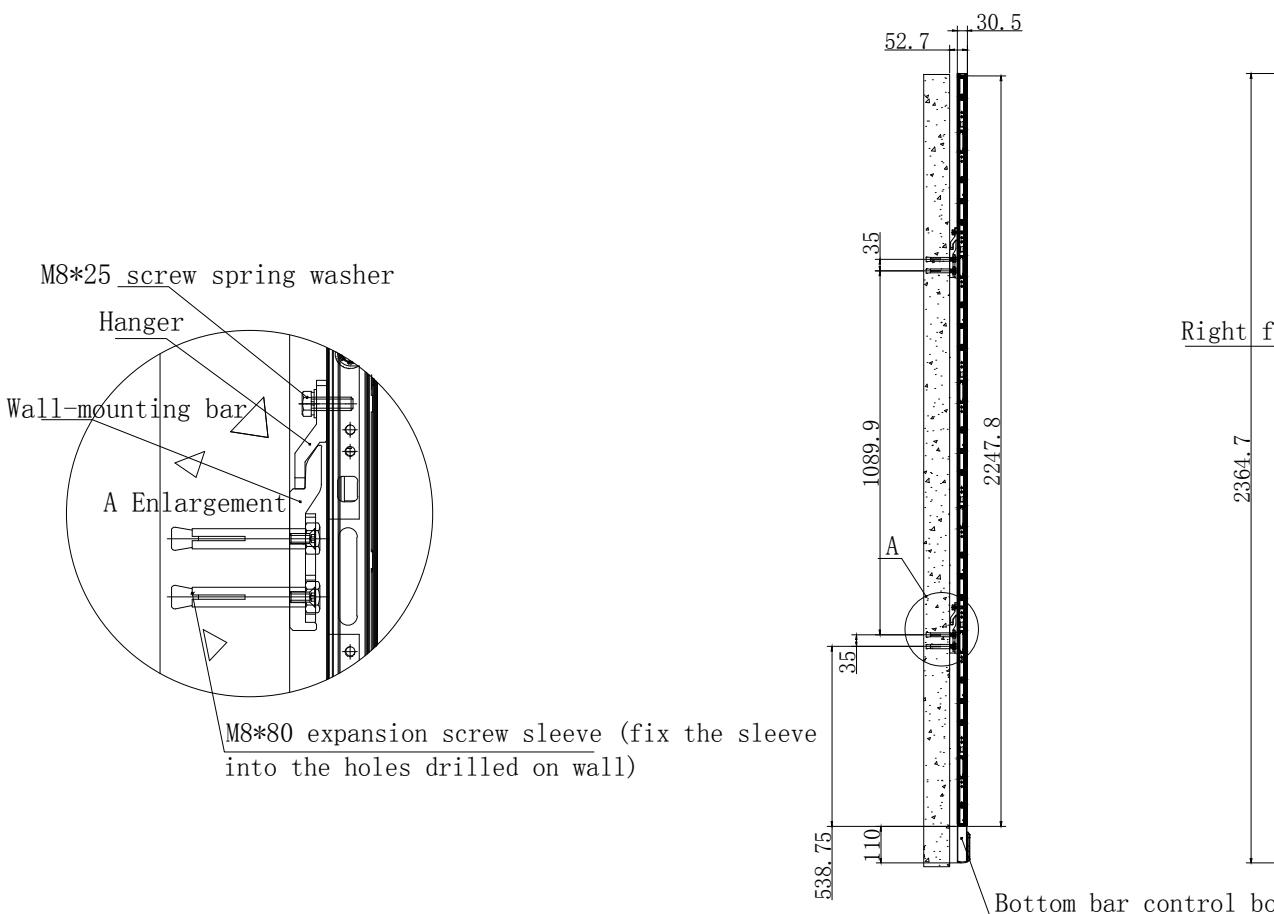


MARK	DATE	DESCRIPTION	NAME
△	XXXX. XX. XX		

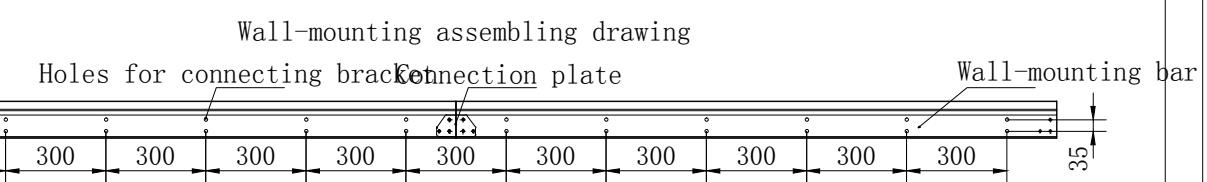


Installation illustration:

1. Connect the wall-mounting bar according to "Wall-mounting Bar Connection Drawing";
2. Confirm the hanging bar height based on side-view drawing and on-site situation, drill holes into the wall for M8\*80 expansion screw sleeve.  
(hole position must be accurate, use level meter if necessary)
3. Install the hanging bar with M8\*80 expansion screw sleeve
4. Every 6 cabinets in one row connected together with top and bottom lock, fix them to hanger with screws shown in the drawing
5. Hang the panel one column by one column, insert the position pin between columns and fix the side lock;
6. Connect the bottom frame according to bottom bar control box structure, and fix it with side lock on the bottom row;
7. Mount the module in sequence, fix left right and top frame (fix the top frame by screws), light the screen and debug.

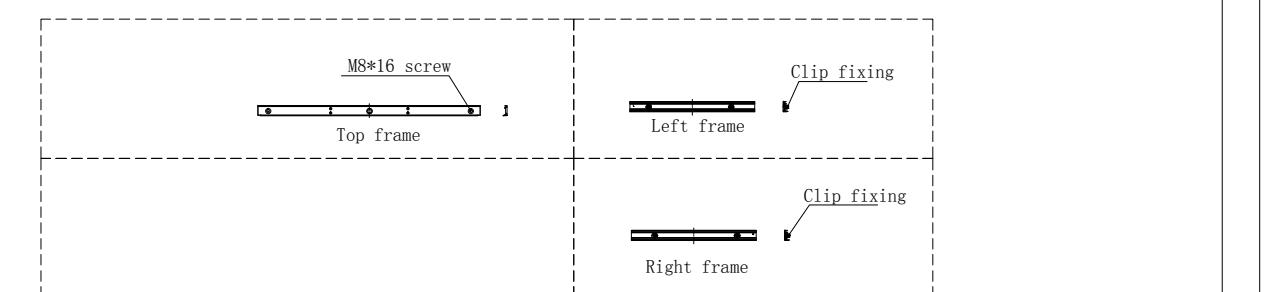

Old Base Map No.	
Base Map No.	
Date	Signature

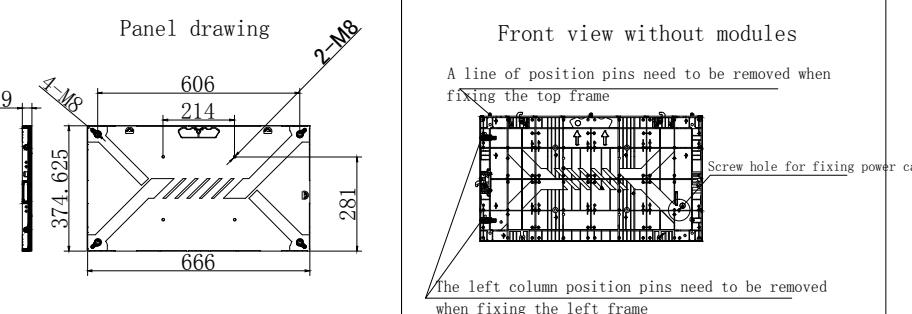

Revise sign	Quantity	Renumber	Signature	Date	Grade Remark	Weight	Ratio
Designer	SJ	SJT			QS1.216.2743-AZ-EN		
Assessor	SH	SHT			180 inch(2 PLUS) wall-hung type drawing		
Countersign	HQ	HQT					
Technologist	GY	GYT					
Standardization	BZH	BZHT					
Supervisor	SD	SDT			Page1		
Approval	PZ	PZT			1 Page In All		