HIKVISION[®]

DS-2CE57H0T-VPITF

Dome Camera

User Manual

U	ontents	
1	Regulatory Information	3
	1.1 FCC Information	3
	1.2 FCC Conditions	3
	1.3 EU Conformity Statement	3
	1.4 Industry Canada ICES-003 Compliance	4
	1.5 Warning	4
	1.6 Safety Instruction	4
	1.6.1 Warnings	4
	1.6.2 Cautions	5
	1.6.3 Mark Description	5
2	Introduction	
	2.1 Main Product Features	6
	2.2 Overview	6
3	Installation	
	3.1 Camera Installation	7
4	Menu Description	10
	4.1 Video Format	11
	4.2 Exposure	11
	4.2.1 Exposure Mode	11
	4.2.2 Shutter	
	4.2.3 AGC (Automatic Gain Control)	12
	4.3 Day/Night	12
	4.3.1 Color	12
	4.3.2 B&W (Black and White)	12
	4.3.3 Auto	12
	4.4 Video Settings	13
	4.4.1 Image Mode	14
	4.4.2 White Balance	14
	4.4.3 Brightness	14
	4.4.4 Contrast	14
	4.4.5 Sharpness	14
	4.4.6 Saturation	14
	4.4.7 DNR (Digital Noise Reduction)	
	4.4.8 Mirror	
	4.5 Factory Default	15
	4.6 Exit	

Thank you for purchasing our product. If there are any questions or requests, do not hesitate to contact the dealer.

This manual applies to the models below:

Model
DS-2CE57H0T-VPITF

This manual may contain several technical mistakes or printing errors, and the content is subject to change without notice. Updates will be added to the new versions of this manual. We will readily improve or update the products or procedures described in the manual.

1 Regulatory Information

1.1 FCC Information

Please take attention that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at their own expense.

1.2 FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

1.3 EU Conformity Statement

This product and, if applicable, the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2014/35/EU, the EMC Directive 2014/30/EU.



2012/19/EU (WEEE Directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



2006/66/EC (Battery Directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information, see: www.recyclethis.info.

1.4 Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (A)/NMB-3(A) standards requirements.

1.5 Warning

This is a class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures.

1.6 Safety Instruction

These instructions are intended to ensure that the user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into "Warnings" and "Cautions."

Warnings: Serious injury or death may occur if any of the warnings are neglected.

Cautions: Injury or equipment damage may occur if any of the cautions are neglected.



Warnings Follow these safeguards to prevent serious injury or death.

Cautions Follow these precautions to prevent potential injury or material damage.



Warnings

In the use of the device, you must be in strict compliance with the electrical safety regulations of the nation and region.

- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 12 VDC according to the IEC60950-1 standard. Refer to technical specifications for detailed information
- Do not connect multiple devices to one power adapter to avoid overheating or a fire hazard caused by overload.
- Make sure that the plug is firmly connected to the power socket.
- Make sure that the device is firmly fixed if wall mounting or ceiling mounting is used.
- If smoke, odor, or noise rise from the device, turn off the power at once, unplug the power cord, then contact the service center.
- Non-professional personnel should never attempt to disassemble the camera.



Cautions

- Do not drop the camera or subject it to physical shock.
- · Do not touch sensor modules with fingers.
- Do not place the camera in extremely hot, cold (the operating temperature shall be -40° to 60° C), dusty, or damp locations, and do not expose it to high electromagnetic radiation.
- If cleaning is necessary, use a clean cloth with a bit of ethanol, and wipe it gently.
- Do not aim the camera at the sun or extra bright places.
- The sensor may be burned out by a laser beam, so if any laser equipment is in use, make sure that the surface of the sensor will not be exposed to the laser beam
- To avoid heat accumulation, good ventilation is required for the operating environment.
- Keep the camera away from liquid while in use for non-waterproof device.
- While in delivery, the camera shall be packed in its original packing or packing of the same material.

1.6.3 Mark Description

Table 0-1 Mark Description

Table 0-1 Mark bescribtion			
Mark	Description		
===	DC Voltage		

2 Introduction

2.1 Main Product Features

- High Performance CMOS Sensor
- · OSD menu with Configurable Parameters
- Smart IR
- · 3-Axis Adjustment

2.2 Overview

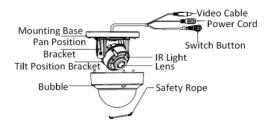


Figure 1, Camera Overview

NOTE: Press and hold the switch button for five seconds to switch the video output. Four kinds of video outputs are available: TVI, AHD, CVI, and CVBS.

3 Installation

Refore You Start

Make sure that the device in the package is in good condition and that all assembly parts are included.

Make sure that all the related equipment is powered off during the installation.

Check the product specification for the installation environment.

Check whether the power supply matches your power output to avoid damage.

Make sure the wall is strong enough to withstand three times the weight of the camera and the mount. If the wall is concrete, insert expansion bolts before

installing the camera. If the wall is wood, use selftapping screws to secure the camera.

If the product does not function properly, contact your dealer or the nearest service center. Do NOT disassemble the camera for repair or maintenance yourself.

3.1 Camera Installation

Before You Start

Ceiling mounting and wall mounting are similar. The following takes ceiling mounting as an example.

- 1. Paste the supplied drill template to the location on the ceiling where the camera is to be installed.
- 2. Drill the screw holes and the cable hole (optional) according to the drill template.

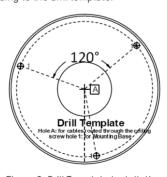


Figure 2, Drill Template Installation



Drilling a cable hole is required when mounting the camera on the ceiling.

Loosen the screws on the dome cover and remove it.

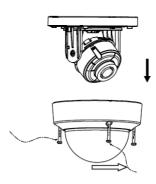


Figure 3, Dome Cover Removal

NOTE: Do not remove the screws completely.

Exercise caution when removing the dome cover. The dome cover is connected to the mounting base using a safety cord.

- Route the cables through the cable hole or the side opening.
- Attach the mounting base to the ceiling with the supplied screws.

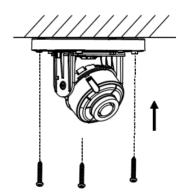


Figure 4, Mounting Base Attachment

- Connect the corresponding cables, such as the power cord and the video cable.
- Power the camera on and verify whether the output image is set at the right angle. If it is not, loosen the tilt adjustment screw and adjust the angle.

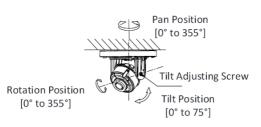


Figure 5, Angle Adjustment

8. Install the dome cover again and tighten the screws in order to complete installation.


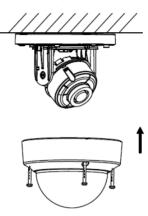


Figure 6, Dome Cover Installation

4 Menu Description

Please follow the steps below to call the menu.

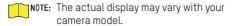

 Connect the camera to the TVI DVR and the monitor, shown in Figure 6.



Figure 6, Connection

- 2. Power on the analog camera, TVI DVR, and monitor to view the image on the monitor.
- 3. Click PTZ Control to enter the PTZ Control interface.
- 4. Call the camera menu by clicking the button, or call preset No. 95.

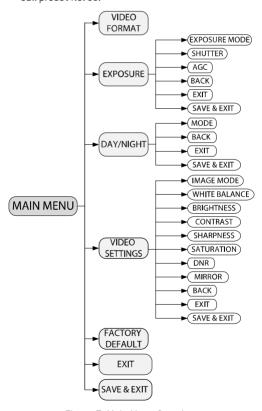


Figure 7, Main Menu Overview

Click the direction arrow to control the camera.

- Click up/down direction button to select the item.
- 2) Click Iris+ to confirm the selection.
- Click left/right direction button to adjust the value of the selected item.

4.1 Video Format

You can set the video format to 5 MP @ 20 fps, 4 MP @ 30 fps, 4 MP @ 25 fps, 2 MP @ 30 fps, or 2 MP @ 25 fps.

4.2 Exposure

Exposure describes the brightness-related parameters, which can be adjusted by **EXPOSURE MODE**, **SHUTTER**, and **AGC**.

EXPOSURE		
EXPOSURE MODE SHUTTER AGC BACK EXIT SAVE & EXIT	◆GLOBAL ◆AUTO LOW ↓↓ ↓↓	>

Figure 8, Exposure

4.2.1 Exposure Mode

You can set the **Exposure Mode** to **Global, BLC, HLC,** or **DWDR**.


- Global: The normal exposure mode, which performs exposure according to the whole image brightness.
- BLC (Backlight Compensation): Compensates light for the front object to make it clear, but may cause overexposure of the background, where the light is strong.
- HLC (Highlight Compensation): The camera detects strong spots (overexposed portion of image), then reduces the brightness of the strong spots to improve the overall image.
- DWDR (Digital Wide Dynamic Range): The DWDR helps the camera provide clear images even under backlight circumstances. When both very bright and very dark areas simultaneously exist in the image, DWDR balances the brightness level of the whole image to provide clear images with details.

4.2.2 Shutter

A photographic device that administers the exposure by limiting the time over which light is admitted.

4.2.3 AGC (Automatic Gain Control)

Optimizes the clarity of the image in poor light conditions. The **AGC** level can be set to **HIGH**, **MEDIUM**, or **I OW**

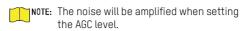

4.3 Day/Night

Color, BW (Black and White), and Auto are selectable for the Day/Night switch.

4.3.1 Color

The image is in color in day mode all the time.

4.3.2 B&W (Black and White)

The image is black and white all the time, and the IR Light turns on in poor light conditions.

You can turn on/off the **IR Light** and set the value of **Smart IR** in this menu.

	DAY/NIGHT
MODE IR LIGHT SMART IR	4 B&W ► 4 ON ► 4 2►
BACK EXIT	→
SAVE & EXIT	L

Figure 9, B&W

- IR Light: You can turn on/off the IR Light to meet the requirements of different circumstances.
- Smart IR: Used to adjust the light to its most suitable intensity and prevent the image from over exposure. The Smart IR value can be adjusted from 1 to 3. The higher the value, the more obvious the effect.

4.3.3 Auto

Automatically switch to Color or B&W (Black and White) according to the actual scene brightness.

You can turn the **IR Light** on/off and set the **Smart IR** value in this menu.

DAY/NIGHT			
MODE IR LIGHT SMART IR D → N THRESHOLD N → D THRESHOLD BACK EXIT SAVE & EXIT	4 AUTO → 4 ON → 42 → 45 → 45 → 4 → 4 →		

Figure 10, Auto

- IR Light: You can turn the IR Light on/off to meet the requirements of different circumstances.
- Smart IR: Adjusts the light to its most suitable intensity and prevents the image from overexposure. The Smart IR value can be adjusted from 1 to 3. The higher the value, the more obvious the effect.
- D/N Threshold (Day to Night Threshold): Controls
 the sensitivity of switching the day mode to the
 night mode. You can set the value from 1 to 9. The
 larger the value, the more sensitive the camera.
- N/D Threshold (Night to Day Threshold): Controls
 the sensitivity of switching the night mode to the
 day mode. You can set the value from 1 to 9. The
 larger the value, the more sensitive the camera.

4.4 Video Settings

Move the cursor to Video Settings and click Iris+to enter the submenu. Image Mode, White Balance, Brightness, Contrast, Sharpness, Saturation, DNR, and Mirror are adjustable.

VIDEO SETTINGS		
IMAGE MODE WHITE BALANCE BRIGHTNESS CONTRAST	STD	
SHARPN ESS	4 5 ►	
SATURATION DNR	1 5 →	
MIRR OR	OFF	
BACK EXIT	4	
SAVE & EXIT	↵	

Figure 11, Video Settings

4.4.1 Image Mode

Image Mode is used to adjust the image saturation. You can set it to STD (Standard), or High-Sat (High Saturation

4 4 2 White Balance

White balance, the white rendition function of the camera, is to adjust the color temperature according to the environment. It can remove unrealistic color casts in the image. You can set the mode to Auto or Manual

- Auto: White balance is adjusted automatically according to the color temperature of the scene illumination
- Manual: You can set the R GAIN/B GAIN value from 1 to 255 to adjust the shades of red/blue color of the image.

WHITE BALANCE		
MODE	MANUAL ▶	
R-GAIN	∢ 5 →	
B-GAIN	√ 5 →	
BACK	↓	
EXIT	┙	
SAVE & EXIT	┙	

Figure 12. Manual Mode

4.4.3 Brightness

Brightness refers to the brightness of the image.

You can set the brightness value to darken or brighten the image. The higher the value, the brighter the image.

4.4.4 Contrast

This feature enhances the difference in color and light between parts of an image.

4.4.5 Sharpness

Sharpness determines the amount of detail an imaging system can reproduce.

4 4 6 Saturation

Saturation is the proportion of pure chromatic color in the total color sensation. The saturation of a color is determined by a combination of light intensity and how much it is distributed across the spectrum of different wavelengths.

The DNR function can decrease the noise effect, especially when capturing moving images in poor light conditions and delivering more accurate and sharper images.

4.4.8 Mirror

OFF, H, V, and HV are selectable for mirror.

- OFF: The mirror function is disabled.
- H: The image is flipped 180° horizontally.
- V: The image is flipped 180° vertically.
- HV: The image is flipped 180° both horizontally and vertically.

4.5 Factory Default

Move the cursor to **Factory Default** and click **Iris+** to reset all the settings to the factory defaults.

4.6 Exit

Move the cursor to **Exit** and click **Iris+** to exit the menu without saving.

4.7 Save & Exit

Move the cursor to **Save & Exit**, and click **Iris+** to save the settings and exit the menu.